User Manual

General Overview

The digiscribble is a unique device that captures handwritten notes on plain paper, stores the notes to memory and uploads them to a PC. The device consists of a Digital Pen and a small receiving unit. digiscribble uses a patented technology combining Ultrasound and Infrared technologies with sophisticated algorithms to enable an accurate tracking and positioning system that tracks the movement of the tip of the pen on any surface and converts the movement into a vector image of the user's handwriting. digiscribble can capture and store up to 50 A4 pages.

At home or in the office, you can connect the digiscribble to the PC using the USB cable, then upload and manage the saved notes.

This User Manual describes both hardware and software features.

This user manual contains the following items:

- **Digital Pen instruction** – How to install and use the digital pen Page 2
- **Mobile Unit Manual** – How to install and use the Digiscribble base unit Page 4
- **Software Suite Manual** – How to use the Software Suite Page 11
- **MyScript Recognition Software** – Recognition Training Instructions Page 43
- **Client Diagnostics Tool** – For reporting technical issues Page 48

1.) Digital PEN User Guide

Overview

Your Pen is a unique device that captures notes handwritten on plain paper, and transmits them to the base unit. The Pen Uses patented technology combining Ultrasound and Infrared technologies with sophisticated algorithms to enable an accurate tracking and positioning system that tracks the movement of the tip of the pen on any surface and converts the movement into a vector image of the user's handwriting.

Setting up Your Pen

Warning: Do not attempt to open the Digital Pen in the middle this will cause the pen to malfunction and invalidate the warranty.

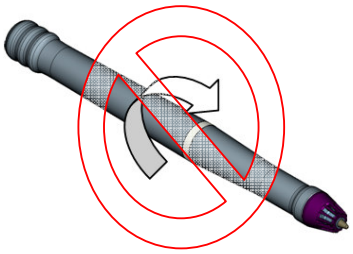

Installing/Replacing an Ink Refill into the Pen

The top of the pen cap also functions as an ink refill extractor.

NOTE: Make sure you use a refill that is similar to the original (standard refill (67.0mm long X 2.35mm diameter).

To insert a new refill

1. Slide the new refill into the tip of the pen

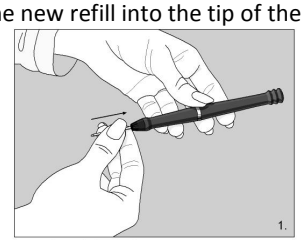

2. Gently press the new refill until it is lodged securely in place

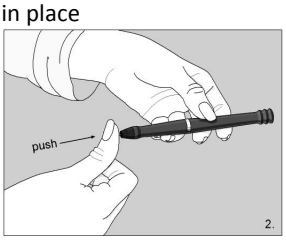

To replace/remove the ink refill

1. Detach the cap from the digital pen

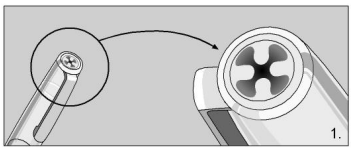

2. Place the ink refill in the middle of the extractor.
   Hold the pen firmly, and apply pressure with the extractor against it.

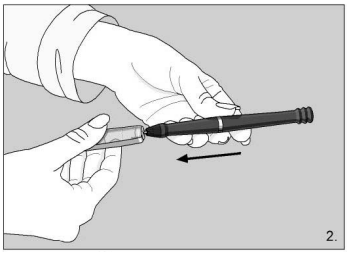

3. Pull the used refill out.

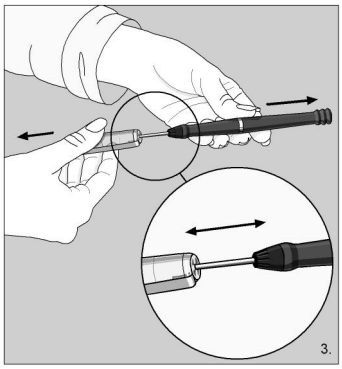

Installing/Replacing Pen Batteries

1. Please use the enclosed GP SR41 batteries with the positive polarity facing up
2. Batteries may be safely disposed of in normal household waste Contact your local government for disposal or recycling practices in your area
3. **Caution**: Risk of explosion if battery is replaced by an incorrect type Please use silver oxide button cells battery type only.

When your Pen battery runs low, the following message appears on your screen:

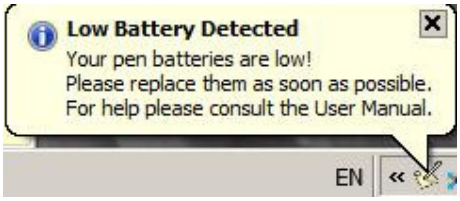
Low Battery Detected
Your pen batteries are low!
Please replace them as soon as possible.
For help please consult the User Manual.
EN

This warning is continuously displayed on each new note and the application tray icon in the system tray changes to reflect the current status until the batteries are replaced.

Tray icon indiocation, for Pen low battery, in Note Mode

Tray icon indiocation, for Pen low battery, in Mouse Mode

Note: Lifetime of the batteries may vary and cannot be guaranteed. Supplied batteries are good for initial use only.

- Remove the battery compartment cover
- Install two SR41 batteries, with the positive poles facing up
- Replace battery compartment cover

2.) Setting Up Your digiscribble

Your hardware includes the digital pen and the memory unit.
Before you begin working with your *Digiscribble,* make sure that there is an ink refill and batteries in the pen. (See Section 1)

Setting up Your Memory Unit

Batteries in the memory unit

Please not that you need to fully charge the memory unit must be charged for 3.5 hours before use.

Your Digiscribble includes a rechargeable internal battery. Each time you connect your unit to your PC USB port, the batteries are being charged. Full charge time takes 3.5 hours

Memory Unit

The memory unit consists of an LCD for status indications. The memory unit also consists of a single button allowing you to turn the unit ON and OFF, as well as creating a new file

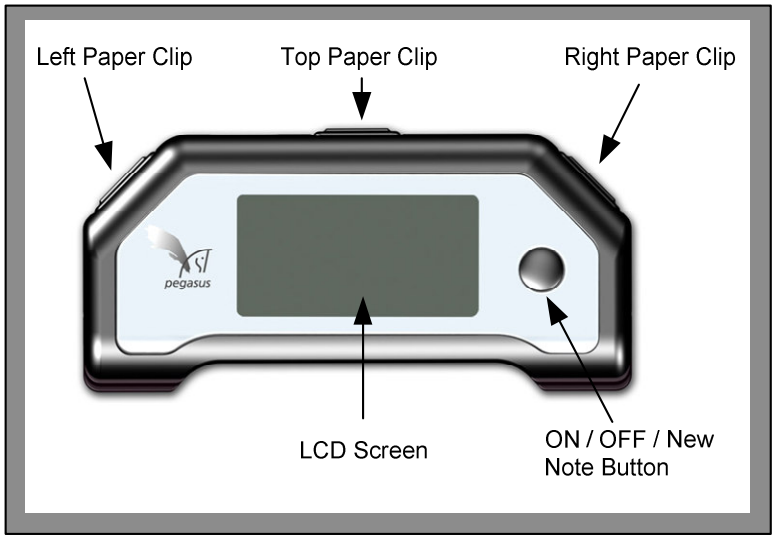

Memory Unit LCD

Use the LCD to view status indications.

	Name	On when	Off When	Blinks When
	Digiscribble is Connected	Unit is connected to PC	Unit is NOT connected to PC	Data is uploaded to PC
	Memory FULL	Digiscribble Unit Memory is full	Less than 90% capacity used	Never

	Pen Low Battery	Low Pen battery	Pen Battery good	Low Pen battery
	Base unit Low battery	Full	Unit is Off	Charging
	Note Mode	Pen down/Pen move	Mouse Mode	Pen down/Pen move
	Mouse Mode	Pen down/Pen move	Pen Mode	Pen down/Pen move
	Number of saved notes in memory	Always	Unit is Off	Memory full Or Error

Memory Unit Connector

Use the Digiscribble's mini USB connector to plug in the USB cable (included in the package), which connects the unit with the PC when uploading notes.

Memory Unit Cable

Note:
Only use the USB cable supplied with your Digiscribble package.

The USB cable (included in the package) plugs into the Memory Unit Connector and is used for the following:

- Uploading notes from the memory unit to the PC
- Working in Connected Mode (Please see below)
- Firmware updates (Please see below)

Power Save mode (in mobile Mode)

In order to save power from the rechargeable battery, while in mobile mode, if there is no activity (Meaning: No Pen usage nor key press on base unit), your base unit will automatically shut down in 10 minutes. Your note will be automatically saved.

To exit power save mode, simply press the base unit top button to turn it on.
Note: This will start a new Note (File)

Mounting your Base Unit to Paper

Your base unit can be mounted in 3 positions on top of the paper.

(Please Note that when working in Vista Mouse/Tablet mode you must position your unit in the top centre position, as per sketch 2 below)

The following images illustrate the way you can mount your base unit, according to the recommended positioning.

a. Mounting your base unit at the **top center** of the paper is recommended for a **single paper** usage

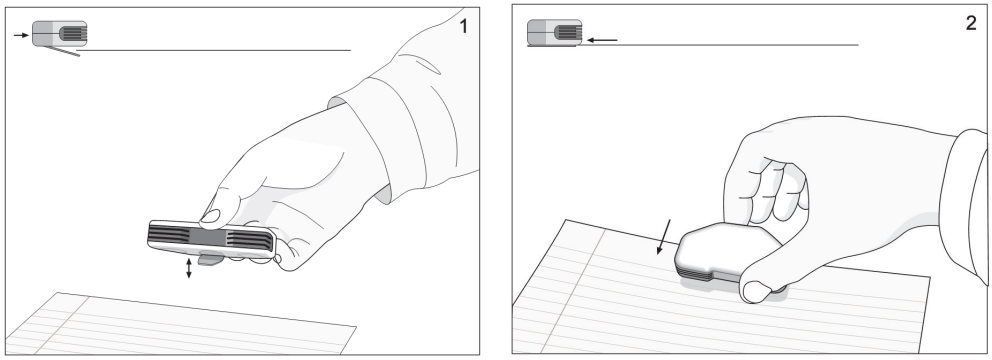

b. Mounting your base unit at the **top left corner** of a **paper block** is recommended for **right hand Users (Only for use in Pen Mode)**

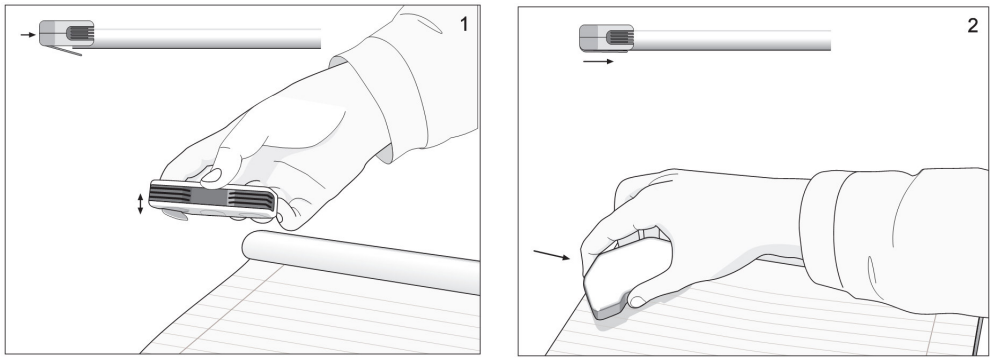

c. Mounting your base unit at the **top right corner** of a **paper block** is recommended for **left hand Users**

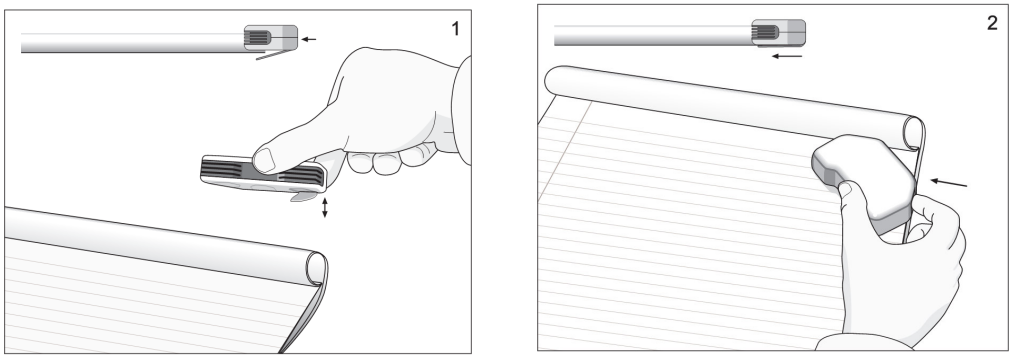

Base Unit Coverage area

The following images illustrate the coverage area of your base unit.

Note:

- The paper is an A4 size paper
- The striped line illustrates the covered area in each of the positions
- **When working in Vista/Mouse Mode you must align your unit at the top centre**

Base unit located at the left corner

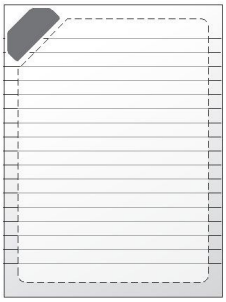

Base unit located at the top center

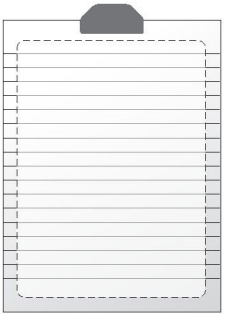

Base unit located at the right corner

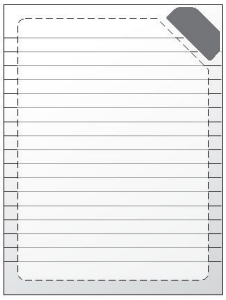

Taking notes away from your PC

Simply place your base unit on top of any paper (Up to A4 size) and start writing using your Digital Pen. To save your note, press the button on top of the base unit

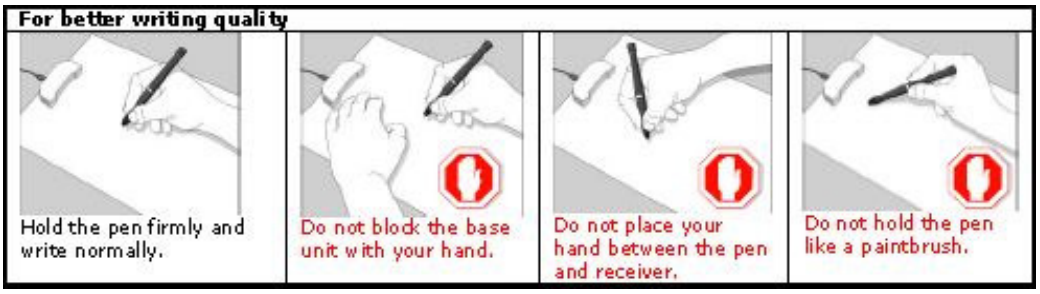
For better writing quality
Hold the pen firmly and write normally.
Do not block the base unit with your hand.
Do not place your hand between the pen and receiver.
Do not hold the pen like a paintbrush.

Connected Mode

While connected you can…

- Upload your notes to your Note Manager PC application
- Take notes On-Line
- Use your pen as a mouse

Work as Tablet PC Pen compatible In Windows Vista

Swap between Pen and Mouse (With Windows Vista only)

To swap between Pen & Mouse, simply click your pen tip on the paper, around the area in front of your base unit, as illustrated in this image.
Alternatively, you can press the button on top of the base unit
Note: Available while connected to your PC only

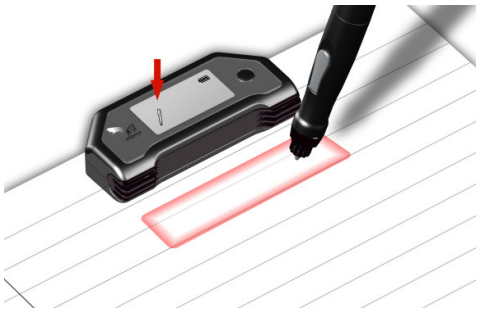

While working with your mouse, place your pen behind the base unit

3.) Software Suite Manual

General Overview

In connected mode (Please see below) most of the functions and features are the same;

However, there are some special features to be used only with the Digiscribble in Connected Mode. Those features are marked with (*)

System Requirements

- Microsoft ® Windows 2000 (SP4) or Microsoft ® Windows XP (SP2) or Microsoft ® Vista
- Minimum 50MB available hard disk space
- Minimum 128MB RAM
- 32 bit color quality
- Screen resolution of 1024x768 pixels
- Available USB port.

Setting Up Your Desktop Software

Your product is packaged with a CD that includes its companion desktop software

Installing the Software

After the installation, when running the application for the 1st time, a new folder named "My Notes," is created in your "My Documents" directory. All your notes will be saved into this directory. In the event that no "My Documents" directory is found, the installation will create a new "My Documents" folder on your C hard drive. The 'My Notes' folder will be created in this directory. If you uninstall, upgrade or reinstall the software in a different location, the note files will remain in this directory, and will not be overwritten

To install Digiscribble software

1. Insert the installation CD into your CD ROM drive. The setup gram should start automatically. If not, run the gram by selecting 'Run' from the Windows 'Start' menu and type in D:\setup.exe. If your CD drive uses a different letter, type that letter instead of D.
2. Follow the instructions on the screen.
   During installation, you will be prompted to choose whether you would like the application to auto-start when windows loads, and whether you would like an application icon on your desktop (in Custom Installation).

Setting your base unit orientation preferences (Mobile Unit Note Mode Only)

Your base unit can be placed in 3 positions, on the top center of an A4 paper, or at the Left/Right corners

Recommended for a single paper usage

Recommended for usage on a paper block, for Right Handed Users

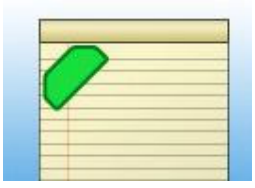

Recommended for usage on a paper block, for Left Handed users

Selecting Pen Modes

Digiscribble supports a *Note/Pen mode* and a *Mouse/Tablet Mode (Vista Only)*
Selecting *default* mode can be done in 2 ways:

a. At the first time you start your Digiscribble application
   OR
b. Using the Digiscribble 'Configuration' menu ('Set Digital Pen Mode')

Changing modes during operation can be done in 2 ways:

a. Press the base unit top button ('Mode' button)
   OR
b. Right click the 'PC Pen' tray icon, and change mode
   OR
c. Clicking on the virtual area using your pen

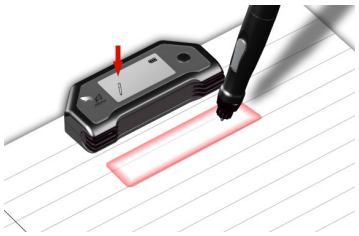

Note: On each mode change, a Balloon will popup indicating the current mode and the corresponding LED will lit

Using your Pen in Mouse Mode

In Mouse mode, your Digital pen behaves as a mouse.
Your pen will have the following functionality:

- To move your mouse cursor you can hover with the pen.
  To start **Hovering** you can press the side button or tip the pen on the paper. The pen will now hover even with no press for about 30 seconds.
- To **click** an object, point your mouse cursor on that object. Now tip the pen on the paper or click the side button
- To **Double-Click** an object, point your mouse cursor on that object. Now tip the pen twice on the paper or click the side button twice
- To **Right-Click** an object, point your mouse cursor on that object. Now press the tip of the pen a bit longer on the paper. A special 'Right Click' cursor will appear.
  Lift the pen from the paper, and the context menu (Right Click menu) appears.

Please note you must align the unit top centre of the page for it to use the Vista Tablet or Digital ink features.

(*) Uploading Notes to your PC

When in Connected Mode, you can upload all your notes from the memory unit to your PC using the Digiscribble software application.

Before doing so, first make sure that:

- Your PC software application is running

- Your memory unit is connected to your PC's USB port using the memory unit USB cable

The "CONNECTED" icon will be displayed on your memory unit LCD

Application Tray Icon will change while uploading your notes:

To upload notes

1. Start the Note Manager
2. In the 'File' menu, select 'Upload'. All the notes in your memory unit are uploaded to your PC.
3. At the end of the upload, a message appears asking if you want to delete all notes on the memory unit.

- **Select 'Yes' to erase all notes on your memory unit.**
- **Select 'NO' to retain the notes**.

NOTE:

a. When you select 'NO', the next time you upload those notes that are already uploaded to the PC Will not be uploaded.

b. However, if you delete notes from the PC application and then upload again from the memory unit, the notes will be uploaded again.

c. You can select one of three options to be performed automatically when your Digiscribble base unit is connected. The following can be selected in the 'Configuration -->Preferences' menu within the Note Manager

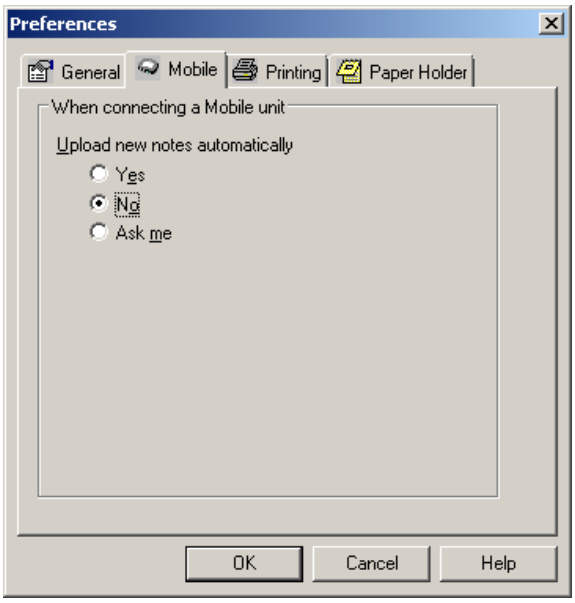

Upload new notes automatically options:

- **YES** – Your Mobile Notes will be automatically uploaded each time you connect it to your PC
- **NO** – Your Mobile Notes will not be uploaded. In this option, you will manually need to perform this action by selecting 'File -->Upload' menu within the Note Manager
- **ASK ME** – Each time you connect the digiscribble base unit, you will be asked if you want to upload your notes

(*) Using the Mobile Digiscribble in Connected Mode

Your *Digiscribble* can also be used while connected to your PC.

Port Auto-Detection

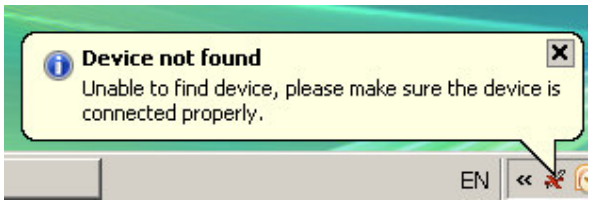

Once you launch the application, the Digiscribble software automatically detects your hardware.

The application automatically searches all ports in order to detect the hardware. If it is unable to locate the connection, the Hardware Detection dialog box appears.

USB Hot-Insertion

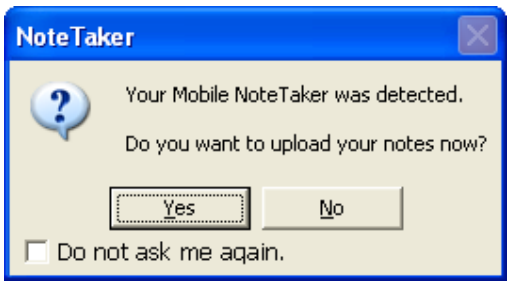

USB Hot Insertion refers to connecting the USB cable while the application is running. The application will auto-detect your hardware if the USB cable is disconnected while the system is running and then re-connected. The application will also auto-detect the hardware if you first run the software and then connect the USB cable.

(*) When you plug in your Digiscribble unit (If the application is running), you will be asked if you want to upload your notes from the Mobile unit memory to your Note Manager software.

Creating Notes

The moment you begin to write or sketch with your digital pen, a **Note Window** appears on your screen that reflects everything that you write on the paper attached to the base unit. The Note Window toolbar allows you to perform various basic functions such as saving, editing, sending and copying your notes while writing, or once you have finished writing.

NOTE: While writing, make sure not to block the line of sight between the pen and the base unit with your hand. When the line of sight is blocked, the Digiscribble will not function properly.

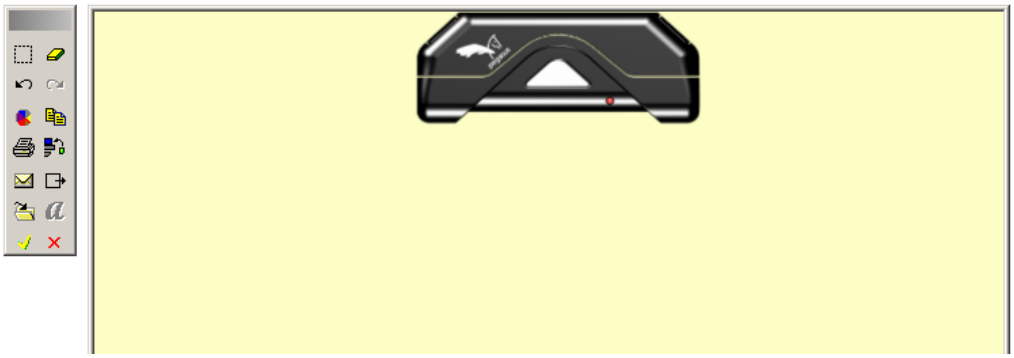

The following table contains all buttons available in the Notes toolbar together with a description of their functions.

Button	Description
	A4 VIEW – Switches the note view to A4 size
	Memo-size View – Switches the note view to memo size

	EDIT – Opens the Note Editor for editing the note
	COPY – Copies the note to the clipboard for pasting into other applications
	CLEAR – Clears the entire on-screen note
	UNDO – Clears the previous stroke made by the digital Pen in reverse chronological order.
	REDO – Replaces previously undone strokes in chronological order
	NOTE COLOR – Changes the current note color.
	PEN STYLES- Changes the Ink color and width.
	SAVE TO FOLDER – Saves the note to a specified folder and closes the note window.
	SEND BY NETWORK – Sends the current note by local network to selected recipients
	PRINT – Prints the current note
	EXPORT TO JPEG- Exports the selected note to a JPEG file
	SEND BY EMAIL - Sends the current note by email to selected recipients as a JPEG attachment
	Convert your note to Text using MyScript® Notes
	CLOSE WITHOUT SAVING – Closes the current note without saving
	SAVE AND CLOSE – Closes the current note and saves it into the Notes Manager under the default Miscellaneous folder (the note is named according to the creation date)

Saving Notes

Notes can be saved at any time during the note creation process. They are automatically saved to the default and named according to the date they were created. Notes can be renamed at any time once they have been saved.

To save a note

- In the Note Window Toolbar, click the Save and Close icon to save the note to the default *Miscellaneous* folder

  click the Save the Folder icon to save the note to any folder you select

NOTE:

It is also possible to configure an 'Auto-Save' feature. That will automatically save your note periodically while you are working

Printing Notes

A note can be printed from any of the 3 Note interfaces – The Note Window, The Note Editor or the Note Manager. Notes can be printed from a saved file in the Note Manager, or while they are open in the Notes Window or Notes Editor.

To print a note from a file

- In the **Note Manager**, click the note name or thumbnail
- In the ***File*** menu, select ***Print Preview*** to first see how the note will look when printed.
- **Note:** You can preview multiple notes simultaneously. Select the first note, then on the keyboard press the <CTRL> key and select the other notes.
- In the File menu, select ***Print*** or click the ***Print*** *button*
- Select your desired print setting and properties (this can also be done through ***Print Setup*** from the ***File menu.*** Some default print preferences can also be set through the Configuration menu preferences)
- Click ***OK.***

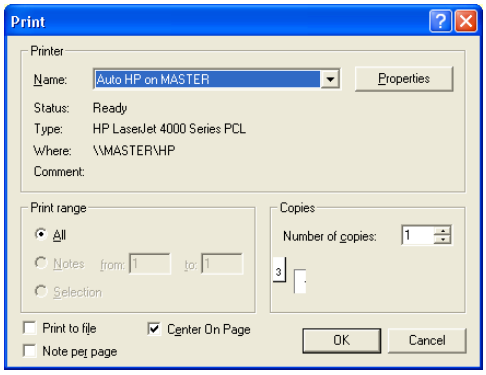

To print an open note

- In the Notes Editor File menu, select ***Print*** or click the ***Print*** *button*
  –or–
  in the Note Window toolbar, simply click the Print button.

Repeat previous steps in the previous procedure.

Setting Your Preferences

Set your default preferences such as note color, auto-save options, print preferences, etc. in the ***Preferences*** dialog box. The dialog box is divided into three tabs, each controlling a different
Aspect of the system: General, Printing, and Ink.

To access Preferences: In the Notes Manager Configuration **menu, select** Preferences**.**

Set you're **General Preferences** as follows:

In the **Auto-Save note in** box, select the time interval (in minutes) after which the system automatically saves your note. This also activates an auto-recovery feature that recovers any unsaved information in case of system crash or power failure. The only input lost are changes made since the last auto-save

Select the **Load When Windows Starts** checkbox to automatically load the *Digiscribble* each time you turn on your computer, so that a new note will pop up whenever you begin to using the Pen

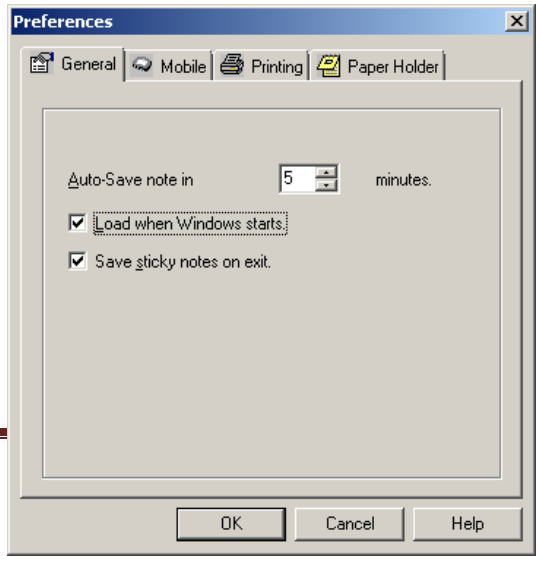

Select the **Save Sticky Notes on Exit** checkbox to automatically save all the new sticky notes you created. The saved sticky notes will then instantly appear the next time you either turn on your computer or restart the application

Set your Mobile Preferences as follows:

Select the Upload new notes automatically if you want your notes to upload immediately on connection.

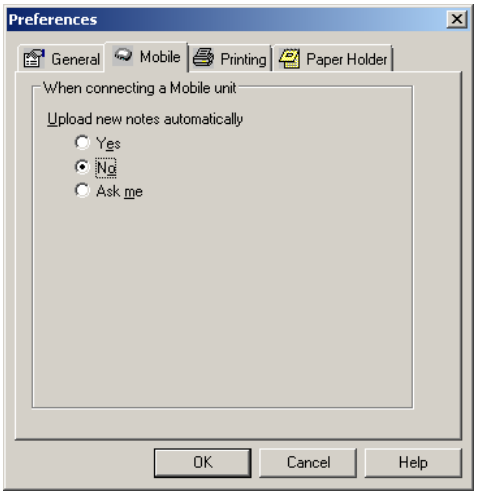

Set your **Print Preferences** as follows:

Select the **Note Per Page** checkbox to specify that when you print notes only one note is printed per page.

Select the **Centre Note On Page** checkbox to specify that notes will always be centered on the page when printed.

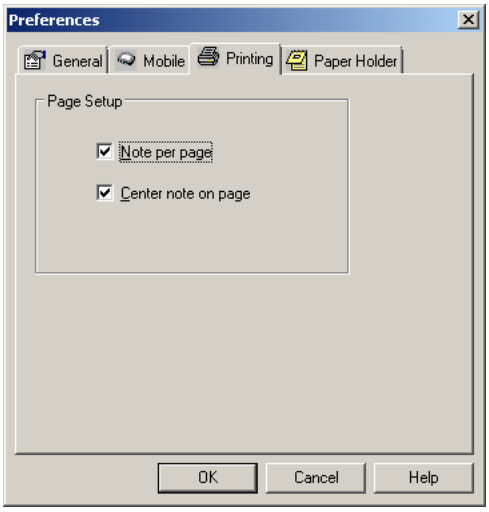

Set your **Paper Holder Preferences** as follows:

Under **Paper Holder Opacity**, drag the slider to set the desired level of transparency

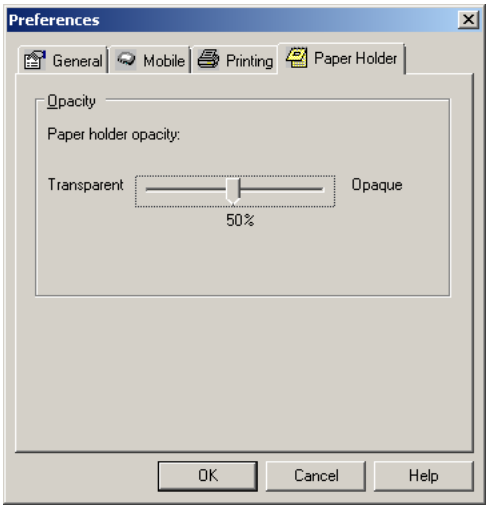

The Note Manager

The Note Manager can be used for storing, viewing, searching, copying and exporting notes.
It is set up in Windows Explorer format, which allows you to browse through
Your files in the left pane and view them in the right pane.

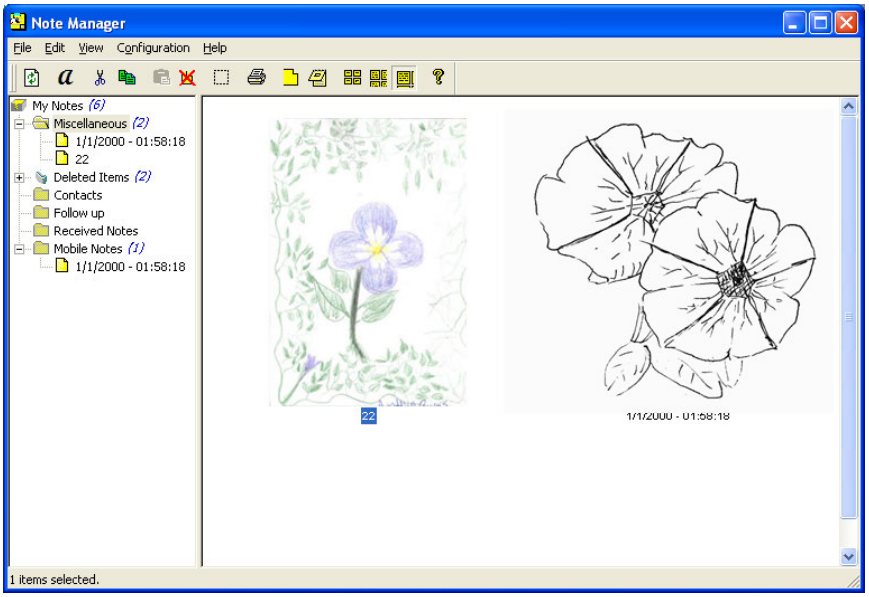

Note Manager Menus

Use these menus to select options and preferences and to perform all software functions relating to storage and transfer of your notes.

The following table contains a list of all menus and menu commands in the system together with a short description of their function.

File Menu	
(*) UPLOAD	Upload Notes from the Mobile unit to the PC
CONVERT TO TEXT	Convert your note to Text using MyScript® Notes
MOVE TO	Allows you to move the selected note to another folder
SEND TO	Sends any note by email (Jpeg or Data file) or local network
IMPORT	Import data file (.pegvf format)
EXPORT	Exports the selected note/s to a JPEG file or a data file format
SET REMINDER	Enables you to set an exact date and time that a selected note will be displayed as a reminder
SHOW AS STICKY NOTE	Make this Note a Sticky Note
SHOW AS PEPAR HOLDER	Make this Note as Paper holder
PERTIES	View Note properties
NEW FOLDER	Create a new folder
EMPTY DELETED ITEMS	Performs a final irreversible deletion of all deleted notes
PRINT	Prints the selected note/notes
PRINT PREVIEW	Displays the selected note as it will look when printed
PRINT SETUP	Allows you to select print options
BACKUP/RESTORE	Backup/Restore your Notes Database

EXIT	Exits the Note Manager interface
Edit Menu	
EDIT NOTE	Allows you to edit a selected note
CUT	Cuts the selected note and saves it to the clipboard
COPY	Copies the selected note and saves it to the clipboard
PASTE	Pastes whatever was last copied or cut to the clipboard
DELETE	Deletes the selected note/notes
RENAME	Allows you to rename the selected note
COLOR	Set Note background color
FIND NOTE	Lets you search through saved notes based on defined criteria
FIND NEXT	Locates the next note that matches the search criteria
SELECT ALL	Selects all notes
View Menu	
SORT	Sort Notes by Date or Name
SMALL THUMB	Displays small thumbnails in the Note Manager view
MEDIUM THUMB	Displays medium sized thumbnails in the Note Manager view
LARGE THUMB	Displays large thumbnails in the Note Manager view
ZOOM IN	Enlarges the thumbnail view by 50% (available only when viewing an individual note thumbnail)
ZOOM TO FIT	Returns the thumbnail view size to the original size (available only when viewing an individual note thumbnail)
ZOOM OUT	Reduces the thumbnail view by 50% (available only when viewing an individual note thumbnail)
Configuration Menu	
DETECT HARDWARE	Allows you to detect your unit
PREFERENCES	Allows you to select your personal preference for elements such as; note color, auto-save, windows options and printing options
PEN STYLES	Lets you select the default ink color and stroke width of the pen
SET DEVICE ORIENTATION	Set your device position on paper (Top center, Left or Right corners)
SET DIGITAL PEN MODE	Select default Pen mode (Mouse/Note)
MOUSE PERTIES	Mouse Resolution
Help Menu	
READ USER MANUAL	Opens the Digiscribble User Manual
REGISTER	Opens a registration web page
ABOUT DIGISCRIBBLE	Displays Digiscribble version information

Note Manager Toolbox

The Note Manager Toolbox contains buttons that give you access to the most commonly used menu commands.

The following table contains a list of each button in the toolbox together with a description of its function

Toolbox Button	Description
	(*) UPLOAD – When in Connected Mode, you can upload all your notes from the mobile unit to your PC using the Digiscribble software application
	Convert your note to Text using MyScript® Notes
	CUT – Cuts the selected note and saves it to the clipboard
	COPY – Copies the selected note and saves it to the clipboard
	PASTE – Pastes whatever was last copied or cut to the clipboard
	DELETE – Deletes the selected note/notes
	EDIT NOTE – Allows you to edit a selected note
	PRINT -- Prints the selected note/notes
	SHOW AS STICKY NOTE – Make your Note as Sticky Note
	SHOW AS PAPER HOLDER – Make your Note as a paper holder
	SMALL THUMB – Displays small thumbnails in the Note Manager view
	MEDIUM THUMB - Displays medium sized of thumbnails in the Note Manager view
	LARGE THUMB - Displays large thumbnails in the Note Manager view
	NOTE MODE
	MOUSE MODE – TURNS YOUR PEN INTO A MOUSE
	ABOUT PC PEN – vides you with your Digiscribble version information

Managing Folders

The Note Manager in installed with predefined folders,

Miscellaneous, Deleted Items, Contacts, Follow Up, Received Notes and ***Mobile Notes***.

You can use these folders for storing your notes and can create additional custom folders, as needed.

Creating a new folder

Creating a new folder can be done in few ways:

You can use 'File' menu to run the 'New Folder'option

- Choose the folder you want to create a sub folder for or choose the 'My Notes' root folder
- Use 'File' menu to run the 'New Folder 'option.
- Fill the new folder name.

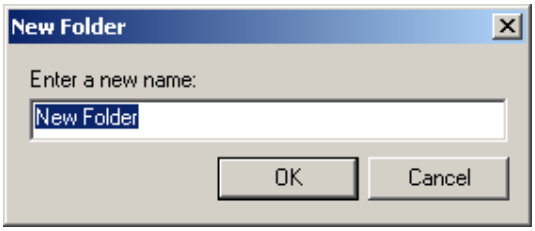

You can right click any folder in the Folders Tree

- Choose the folder you want to create a sub folder for or choose the 'My Notes' root folder
- Right click this folder
- Choose 'New Folder' from the drop down menu
- A new folder will be created.
- To rename this folder please see 'Renaming a folder'

Renaming a folder

All folders can be renamed except for the predefined
Miscellaneous, Deleted Items, Received Notes and ***Mobile Notes***

To rename an existing folder:

3. Right-click the folder you want to rename
   (Or press F2 key, when the folder is selected).
4. In the short-cut menu, select Rename. The folder name is now highlighted.
5. Type the new folder name.

Deleting a folder

All folders can be deleted except for the predefined
Miscellaneous, Deleted Items, Received Notes and ***Mobile Notes***

To delete a folder

6. Right-click the folder you want to delete
   (Or press the delete button, when the folder is selected).
7. In the shortcut menu that appears, select ***Delete.***
8. Select '***Yes'*** to confirm that you would like to delete the folder, or '***No'*** to cancel the operation.

Renaming Notes

Each time you create and save a new note, it is automatically given a name that corresponds to the exact date and time the note was created. You can rename notes at any time to give them names that are more meaningful to you.

To rename a note:

9. Right-click the note you want to rename
   (Or click F2 key, when the note is selected).
10. In the shortcut menu that appears, select ***Rename***. The note name is highlighted.
11. Type the new note name.

Moving Notes

You can move a note from the folder it is currently in to any other folder.

To move a note to another folder:

12. In the **Note Manager**, select the note file name or thumbnail.
13. From the ***File*** menu, select ***Move to***,
    –or–
    right-click the note name or thumbnail and in the shortcut menu, select ***Move to***
14. Select the folder name to which you would like to move the note

NOTE: You can also use 'Drag and Drop' to move a note.

Finding Notes

It is possible to search through your saved notes to locate any particular note.

In order to perform a search:

15. In the Notes Manager *Edit* menu, select *Find Note*.
16. Select the folder or folders where you would like to search.
17. If you would like to search by description or note name, select *by description* and then in the *search for* field, type in the name or description of the note you are looking for.
18. To search by creation date parameters, select *All notes created* and then specify the date range according to which you would like to search.
19. Click *Find*

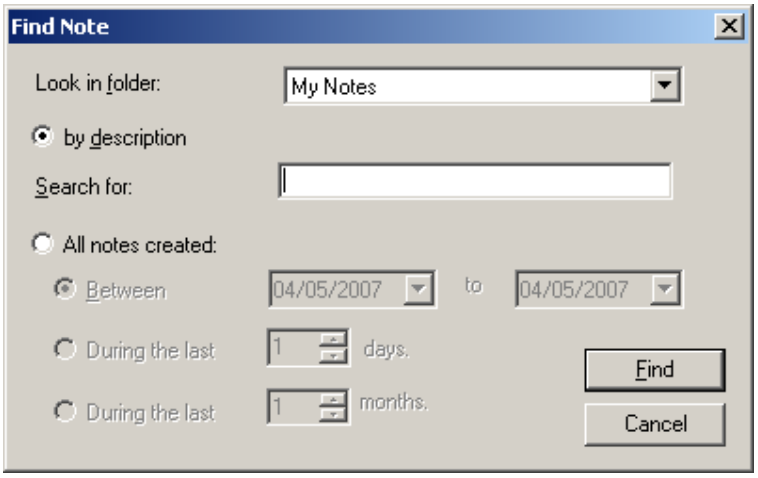

Backup and Restore Notes Database

You can use the Note Manager to backup your entire database, and restore it when needed.

To backup your database:

Select '*File -->Backup/Restore --> Backup Database*' from the Note Manager menu
the following dialog will appear

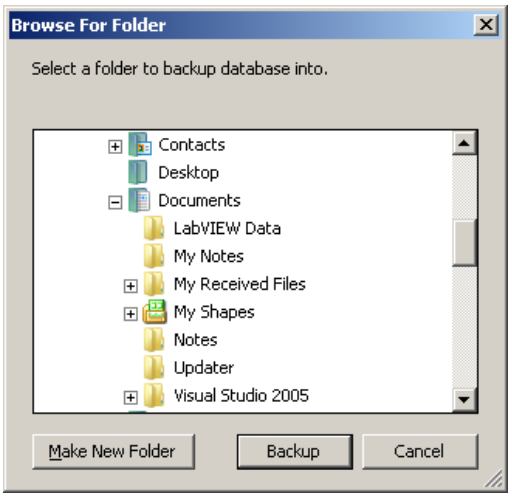

Choose the destination path to backup your entire notes database
(You can create a new folder by pressing '*Make New Folder*' button)

Click the '*Backup*' button

Upon a successful backup, the following message will appear:

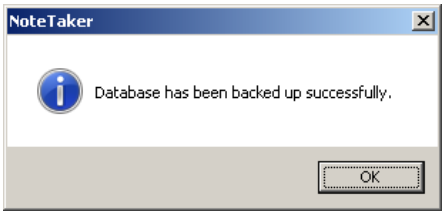

To restore your database

Select '*File -->Backup/Restore --> Restore Database*' from the Note Manager menu
the following dialog will appear

Choose the location of your database backup

Click the '*Restore*' button

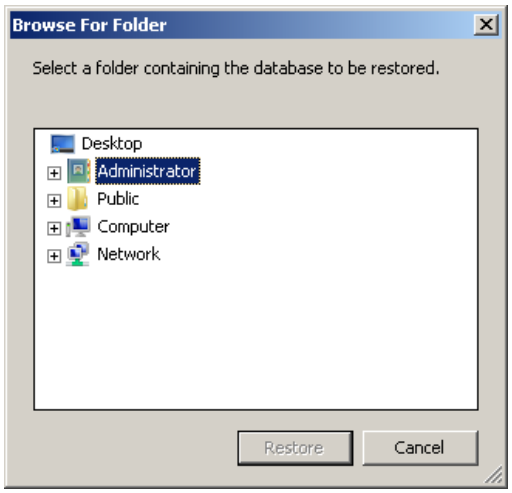

Upon a successful restore, your database will be restores to a new folder in the Note Manager.

This new folder will be named 'Restored database' and will also be according to the restoring date and time

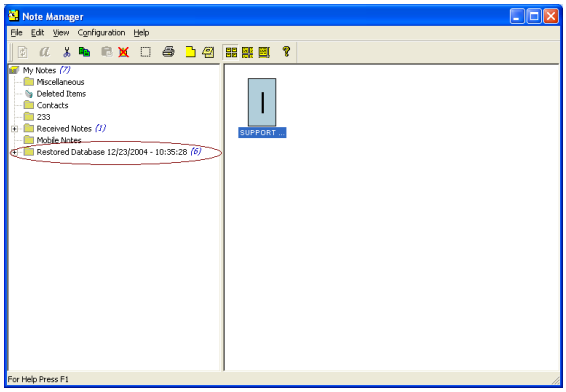

Selecting Pen Style

You can change Ink color and width of on-screen pen strokes at any time

(The default pen color is black and the default width is 1)

To select the pen style:

In the Notes Manager ***Configuration*** menu, select ***Pen Styles***
–or–
Right-click the new note and in the shortcut menu that appears, select Pen Styles.

Click the arrow to the right of the current pen color to open the Pen Color list and select the color you want

Use the arrows to the right of the current pen color width to select a pen stroke width between 1-10 (you can also type the desired width directly in the box)

Click Default in order to restore the default settings at any time

Click Cancel to return to the Note Manager or to the note without changing the current pen style settings

NOTE:

You can also change the color and width of any pen stroke in the Note Editor by selecting an individual pen stroke or group of strokes and then in the **Tools** Menu selecting Color or Line Width.

Setting a Reminder

You can use notes stored on your PC to be reminders by setting an exact date and time for a selected note to automatically pop up on your screen.

To set a Reminder:
In the Note Manager, select the note or note thumbnail
In the ***File*** menu, select ***Set Reminder***
–or–
Right-click the note and , in the shortcut menu, select ***Set Reminder***

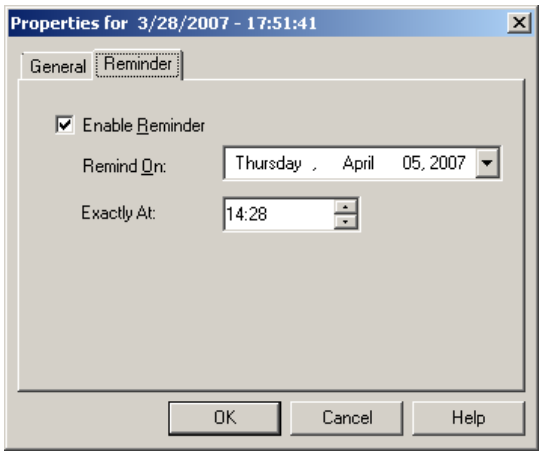

Select the **Enable Reminder** checkbox

In the **Remind On** list, click the arrow to the right of the list and select a date from the drop down calendar that appear

NOTE*:*
If you do not select an exact time, the reminder will appear when you turn on your computer on the specified day.

Setting a Reminder to Snooze:
When a reminder appears, you can set it to snooze so that it disappears and then pops up again within 5, 10, 15 or 20 minutes (depending on your preference).

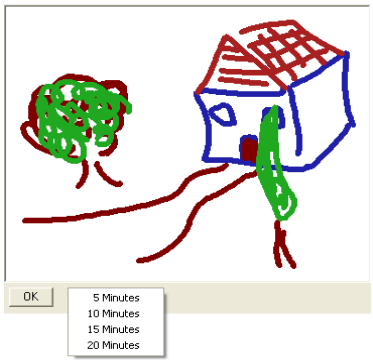

Click Snooze

In the drop-down list, select the number of minutes you want to "snooze" until you're reminded again.

Exporting to JPEG

You can export any note to JPEG file format, turning the note into a graphic image. This is useful for example when you want to insert notes into documents created in other applications such as MS Word or PowerPoint.

To export a note to jpeg format:

In the Note Manager, select the note you want to export

Right-click the note name,
–or–
in the File menu, select Export to JPEG. The Export dialog box appears

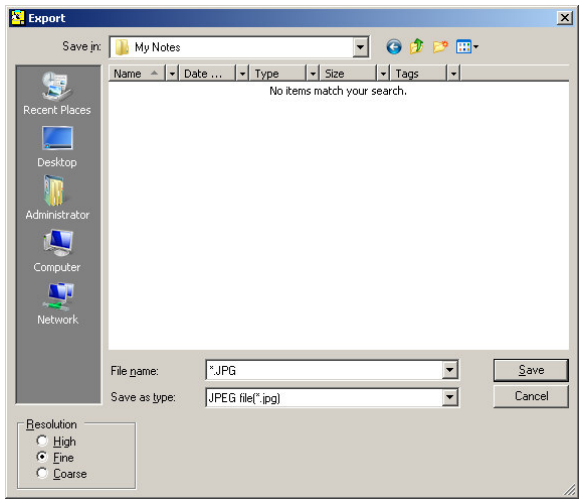

Save in, select the destination file path

In the **Save as type** list, select JPEG

Under **Resolution**, select the resolution quality

Click **Save**

NOTE: You can export multiple notes simultaneously. On the keyboard, hold down the <CTRL> key and then in the Note Manager, select the notes you want to export.

Exporting to a Data format file

You can export any note to a vector format file, so that another Digiscribble user can import this file into the Note Manager database

To export a note to a data file (.pegvf file):

In the **Note Manager**, select the note you want to export

Right-click the note name,
–or–
in the File menu, select 'Export as a data file'.
The Export dialog box appears

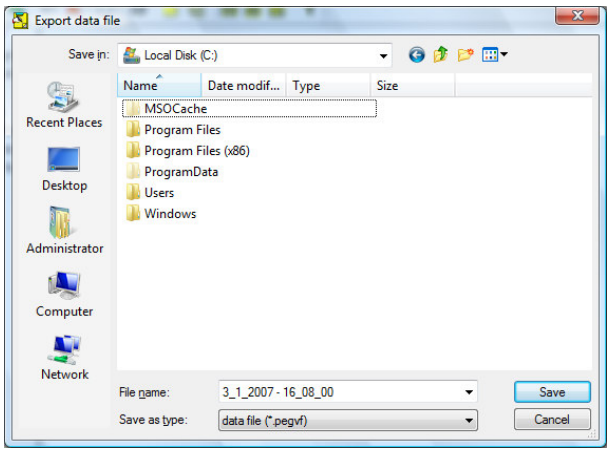

In **Save in**, select the destination file path

Click **Save**

Importing a Data format file

You can import any .pegvf Data format file into the Note Manager database

To import a data format file:

In the File menu, select 'Import a data file'. The Import dialog box appears

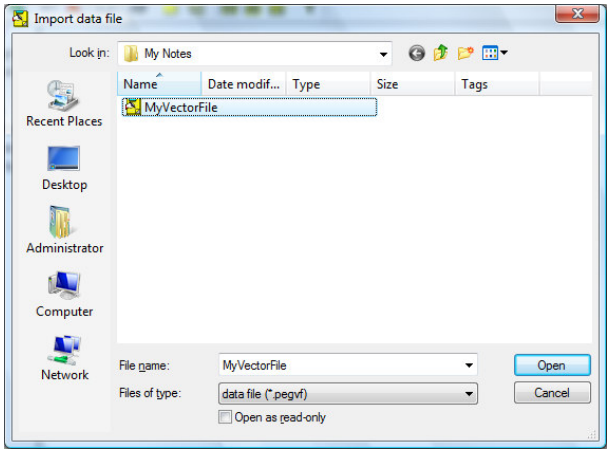

Select the file you would like to import

Click **Open**

Pasting Notes into Other Applications

You can paste any saved note into another application

(The note is automatically converted into a JPEG image).

To paste a note into another application:

20. In the Note Manager, select the note or thumbnail.
21. In the Edit menu, select ***Copy*** or ***Cut*** (cutting will delete the note from its current location),
    –or–
    right-click the note name or thumbnail and, in the shortcut menu, select ***Copy*** or ***Cut***.
22. Open the application into which you would like to paste the note
23. In the open application, locate and select the ***Paste*** option.

Note: You can also copy a note that you are currently sketching by clicking on the button in the Note Toolbar

Creating Sticky Notes

You can create sticky notes by doing one of the following:

Dragging notes from the Note Manager to your desktop

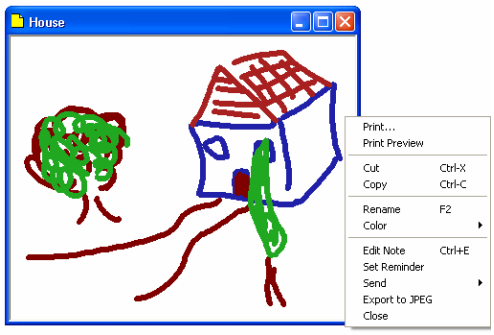

Select a note in the Note Manager, right click it and select '*Show as Sticky Note*'

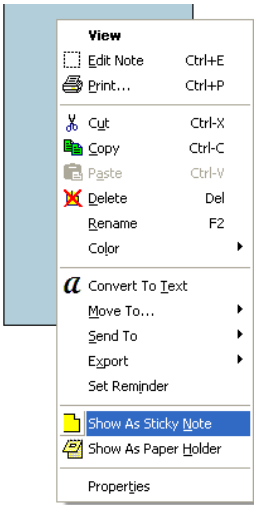

Select a note in the Note Manager; click the '*Show as Sticky Note*' toolbar button

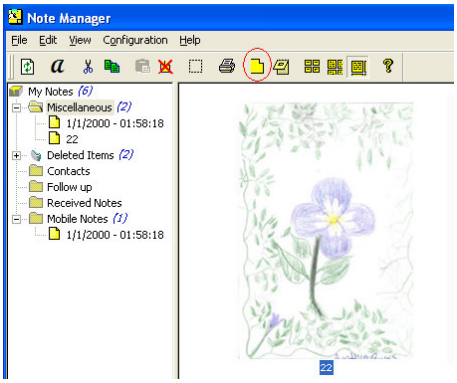

NOTES:

To view additional sticky note options, right click on the sticky note

Select '*HIDE*' to hide a sticky note into the application tray icon

You can restore any hidden sticky note by right clicking the application tray icon, and selecting *Sticky Notes*'

Then select the note you would like to restore.

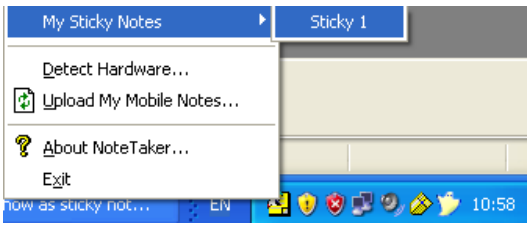

'*My*

A Sticky Note can automatically pop up after the application has been closed and re-opened, or after system reset. In the ***Note Manager***, use the ***Configuration*** menu

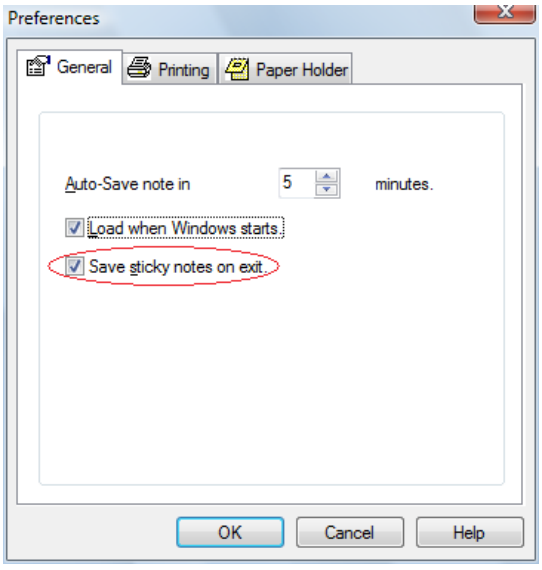

Creating Paper holder Notes

Paper holder notes can help you in many ways.
common way is if you need to read your note and rewrite it in a text editor.
paper holder note will always be on top, and its transparency can be adjusted

You can create paper holder note by doing one of the following:

Select a note in the Note Manager, right click it and select '*Show as Paper Holder*'

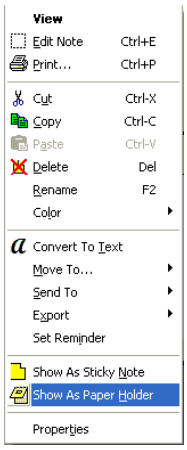

One
A

Select a note in the Note Manager; click the '*Show as Paper Holder*' toolbar button.

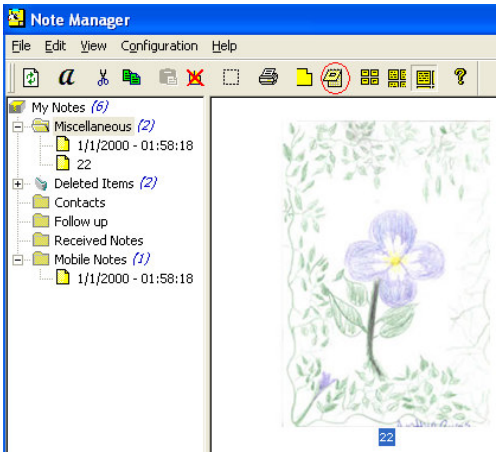

NOTES:

You can hide and show paper holder notes the same way you hide and show sticky note

To view additional options, right click on the sticky note

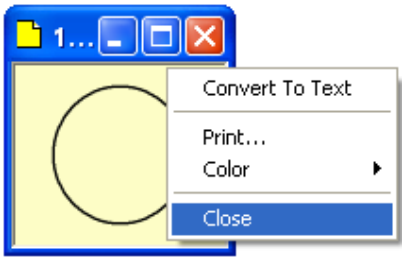

You can set the transparency to a Paper Holder.

In the ***Note Manager***, use the ***Configuration*** menu

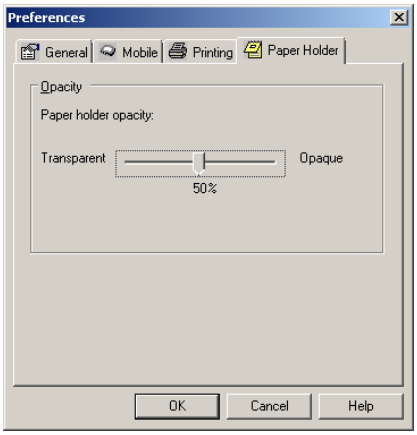

The Note Editor

Notes can be edited at any time, whether you are still writing one, or you want to edit a note you have already saved in the Note Manager. The Note Editor contains menus and a toolbar that give you access to a wide selection of editing functions

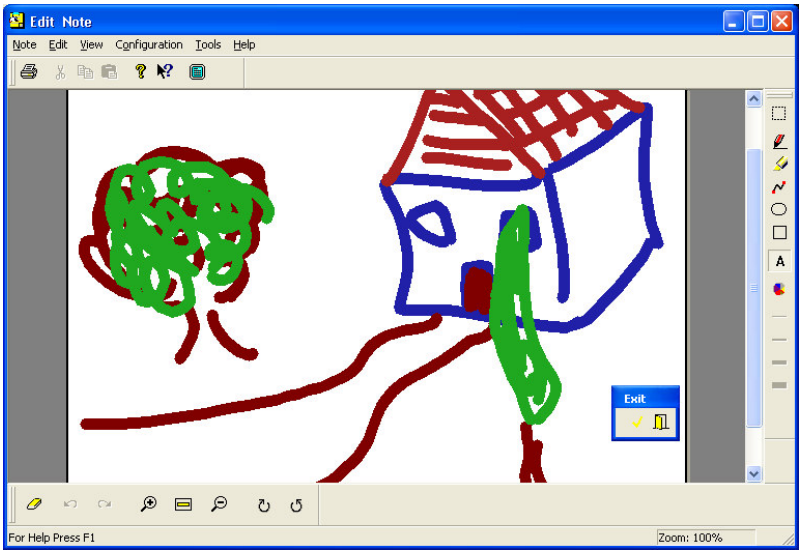

Note Editor Menus

The following table lists all menu commands available in the Note Editor, together with a description

Note menu	
PRINT	Prints the selected note
PRINT PREVIEW	Displays the selected note as it will look when printed
PRINT SETUP	Allows you to select print options
EXIT & SAVE/SEND	Saves the edited note and closes the editing
EXIT W/O SAVE/SEND	Closes the editing application without saving any changes
Edit Menu	
UNDO	Clears the last stroke made by the digital Pen. Clicking *Undo* again will clear the stroke made before that, and so forth.
REDO	Replaces previously undone strokes in chronological order
CUT	Cuts the selected note and saves it to the clipboard
COPY	Copies the selected note and saves it to the clipboard
PASTE	Pastes whatever was last saved to the clipboard
DELETE	Deletes the selected note
CLEAR PAGE	Clears the entire on-screen note
SELECT ALL	Selects all the pen strokes in the note
View menu	
ZOOM IN	Increases the note view

ZOOM TO FIT	Restores the note view to the original size
ZOOM OUT	Reduces the note view
TOOLBARS	Allows you to select which editing toolbars you want to view (Standard, Tools, Manager)
STATUS BAR	Allows you to view or hide the status bar at the bottom of the Notes Editor
FULL SCREEN	Opens the Notes Editor into full screen view
Configuration menu	
PEN/HIGHLIGHT PARAMS	Lets you select the color and width of the Editor Pen and Highlighter
Tools menu	
SELECTOR	Allows you to select any area by clicking and dragging with your mouse
PEN	Allows you to freestyle draw with your mouse
HIGHLIGHT	Allows you to highlight any area by freestyle drawing with your mouse
LINE	Allows you to insert a line of any length
CIRCLE	Allows you to insert a circle image of any size
RECTANGLE	Allows you to insert a rectangle of any size
TEXT	Allows you to insert type written text
COLOR	Allows you to pre-select or change the color of pen strokes or to highlight strokes or text
LINE WIDTH 1	Allows you to pre-select or change the thickness of any stroke to width 1
LINE WIDTH 2	Allows you to pre-select or change the thickness of any stroke to width 2
LINE WIDTH 4	Allows you to pre-select or change the thickness of any stroke to width 4
LINE WIDTH 8	Allows you to pre-select or change the thickness of any stroke to width 8
Help menu	
HELP TOPICS	Opens the Digiscribble Online Help file
ABOUT DIGISCRIBBLE	Displays Digiscribble version information

Note Editor Toolbars

The Note Editor Toolbars vide you with quick access to the more common menu commands.

The following table lists all toolbar buttons, together with a description of their functions.

Standard Toolbar	
	PRINT -- Prints the selected note
	CUT – Cuts the selected note and saves it to the clipboard
	COPY – Copies the selected note and saves it to the clipboard
	PASTE – Pastes whatever was last saved to the clipboard
	ABOUT DIGISCRIBBLE – vides you with your Digiscribble version information
	HELP TOPICS – vides you with your Digiscribble help
	FULL SCREEN – Brings the Notes Editor into full screen view
Tools toolbar	
	SELECT – Allows you to select any area by clicking and dragging with your mouse
	PEN – Allows you to freestyle draw using your mouse
	HIGHLIGHT – Allows you to highlight any area by freestyle drawing using your mouse
	LINE – Allows you to insert a line of any length
	CIRCLE – Allows you to insert a circle image of any size
	RECTANGLE – Allows you to insert a rectangle of any size
	TEXT – Allows you to insert type written text
	COLOR – Allows you to pre-select or change the color of pen strokes or to highlight strokes or text
	LINE WIDTH 1 – Allows you to pre-select or change the thickness of any stroke to width 1
	LINE WIDTH 2 – Allows you to pre-select or change the thickness of any stroke to width 2
	LINE WIDTH 4 – Allows you to pre-select or change the thickness of any stroke to width 4
	LINE WIDTH 8 – Allows you to pre-select or change the thickness of any stroke to width 8
Manager toolbar	

	CLEAR PAGE – Clears the entire on-screen note
	UNDO- Clears the previous action
	REDO- Replaces previously undone action
	ZOOM IN – Enlarges the note view
	ZOOM TO FIT - Returns the note view to the original size
	ZOOM OUT – Reduces the note view
	ROTATE RIGHT – Rotates the entire note image 180° to the right
	ROTATE LEFT – Rotates the entire note image 180° to the left

Editing Notes

Once a note is open in the Note Editor, you can only edit elements of the note (pen strokes, etc.) after they have been selected. Once you have selected the area you want to edit, you can delete it, change the color and/or width of the pen strokes, etc. You can also add figures and drawings into the note using the various drawing features (insert circle, line, highlight, text, etc). These new elements can also be edited after you insert them.

To start editing a note

24. While working on a note, or in the **Note Manager** select the note and click the ***Edit Note*** button ,
–Or–
right-click the note and, in the shortcut menu, click **Edit Note**.
-Or-
Double click a note in the note view mode

    The Note Editor window opens displaying the selected note.

25. Use the ***Select Area*** button in the Tools Toolbar or the ***Select*** option from the Tools Menu to select a particular stroke or group of strokes,
–or–
in the **Edit** menu, click **Select All** to select the entire note.

NOTE: While editing, you can still use your pen to continue sketching on the note.

Sending Notes

You can send any note by email or over the local network. An emailed note appears as a JPEG attachment to the recipient. In order to send a note by local network, the recipient must have the Digiscribble software installed and running on his/her PC. Notes can be sent by email or network from both the *Note* window and the *Note Manager*.

Sending notes by email

The Digiscribble uses your default email client to send notes as email.

To send a note immediately after you have completed it:

26. Click the ***Send Note by Email*** button
27. A new email form opens with the note in the form of a JPEG attachment
28. Type in the desired recipient's email address and any desired text in the subject and body of the email
29. Send the email

To send a saved note:

Any saved note can be send as a JPEG or vector format file

- In the **Note Manager**, click the note name or thumbnail.
- In the ***File*** menu, select ***Send TO --> Email***,
  –or–
  right-click the note name or thumbnail and, in the shortcut menu that appears, select ***Send TO--> E-Mail***.
- A new email form opens with the note attached as a JPEG file.
- Type the desired recipient's email address and any desired text in the subject and body of the email
- Send the email

Sending notes over the local network

To send a note immediately after you have completed it

30. In the Note Window, click the Send Note to Network PC button .
31. In the **Send Note** dialog box, a list of all network users that have the Digiscribble application installed and running automatically appears. Select the Name/IP address of the person(s) to whom you would like to send the note
    –or–
    click **Select All** to send the note to everyone on the list.
32. Click **Send**.

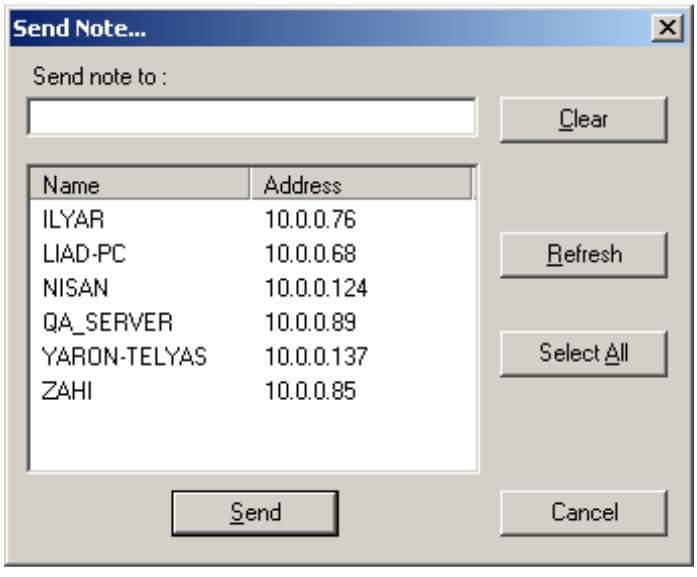

To send a saved note:

- In the **Note Manager**, click the note name or thumbnail.
- In the ***File*** menu, select **Send To--> Network PC**,
  –or–
  right-click the note name or thumbnail and, in the shortcut menu that appears, select ***Send To --> Network PC***.
- In the **Send Note** dialog box, a list of all network users that have the Digiscribble application installed and running automatically appears. Select the Name/IP address of the person(s) to whom you would like to send the note
  –or–
  click **Select All** to send the note to everyone on the list.
- Click **Send**

NOTE: You can select multiple recipients when sending a note via local network by selecting a name in the list, then pressing <CTRL> on the keyboard and selecting another name or names

Receiving notes over the local network

Users on a local area network (LAN) such as may exist in an office environment can receive notes over the LAN.

When you receive a note, it automatically appears on your PC screen and a sound is heard

Right click the received note to have the following options:

- Replying to the sender (this includes an editing function so the user can add text and sketches
- Printing the note
- Saving the note
- Setting a reminder
- Sending the note to other users on the network
- Close the Note

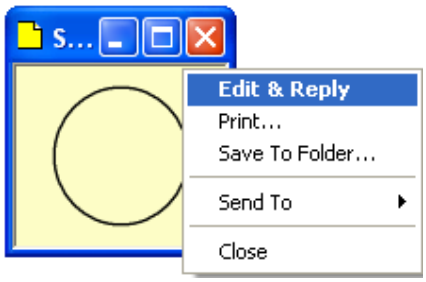

Notes received by LAN will be saved under '*Received Notes*' in the *Note Manager*

Application Tray Icon

Right clicking the application tray icon gives you the ability to perform the following actions:

Browse Notes – Open the Note Manger

Note Mode ***or Mouse Mode*** **-** Choose your mode

Detect Hardware - Detect your hardware. If your hardware is not detected, the tray icon changes to

Upload My Mobile Notes - Upload your Notes from the Digiscribble. the tray icon changes to

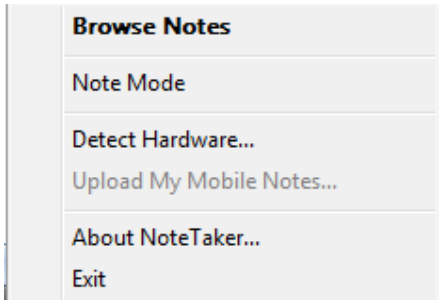

About Digiscribble -
See application details (About Dialog)

Exit -
Exit the application

MyScript® Notes Character Recognition Application

General Overview

Digiscribble Software Suite integrates with Vision Objects **MyScript® Notes** application. **MyScript® Notes** is a well known character recognition engine. You can use Digiscribble to export your notes into the **MyScript® Notes** recognition engine.

Installing MyScript® Notes

Please use 'Vision Objects' CD within the duct package.
Follow 'Vision Objects' installation instructions.

Operating MyScript® Notes

To use the **MyScript® Notes** recognition engine, please make sure you have installed Digiscribble Software Suite. Then, you can select a note, Notes, or a Sticky Note, and export them to the **MyScript® Notes** recognition engine.

Exportable objects from Digiscribble to MyScript® Notes

The following objects can be exported to **MyScript® Notes**:

- A New Note
- A single Note from 'Digiscribble Manager'
- Multi pages Note from 'Digiscribble Manager'
- Sticky Note from 'Digiscribble Manager'

Exporting objects to MyScript

Use the following methods for each type of object in order to export it to **MyScript® Notes**:

A New Note –

Click the 'Convert to Text' tool bar button

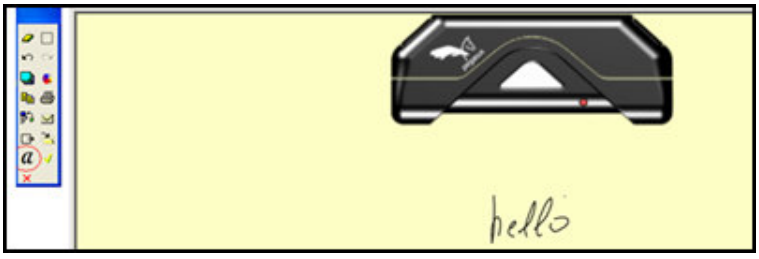

A single/multi page Note from 'Digiscribble Manager'-

Right click the Note in the thumbnail area.

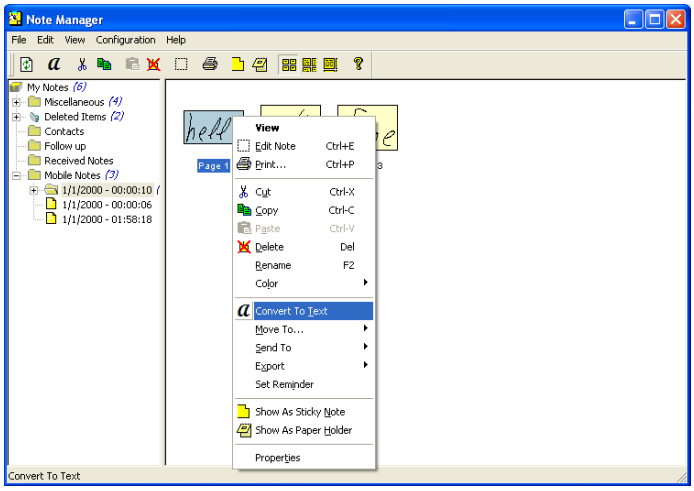

Selecting a note and selecting "*File --> Convert to Text*" menu

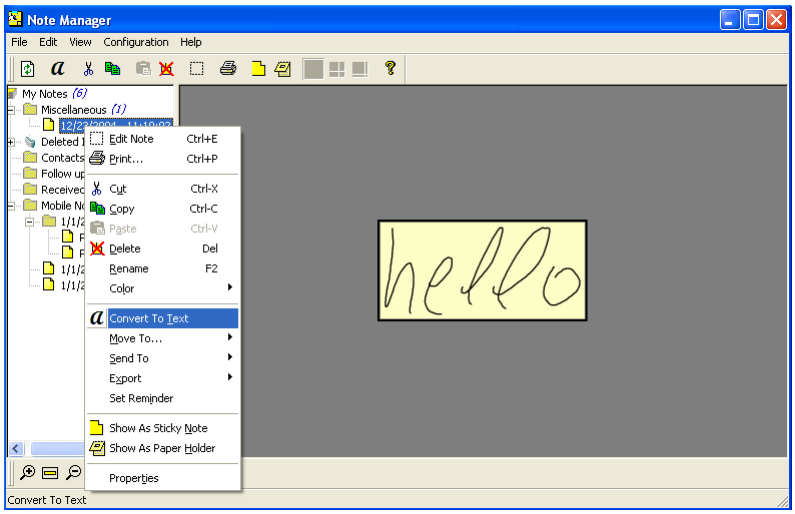

Selecting a note and selecting "*File --> Convert to Text*" menu

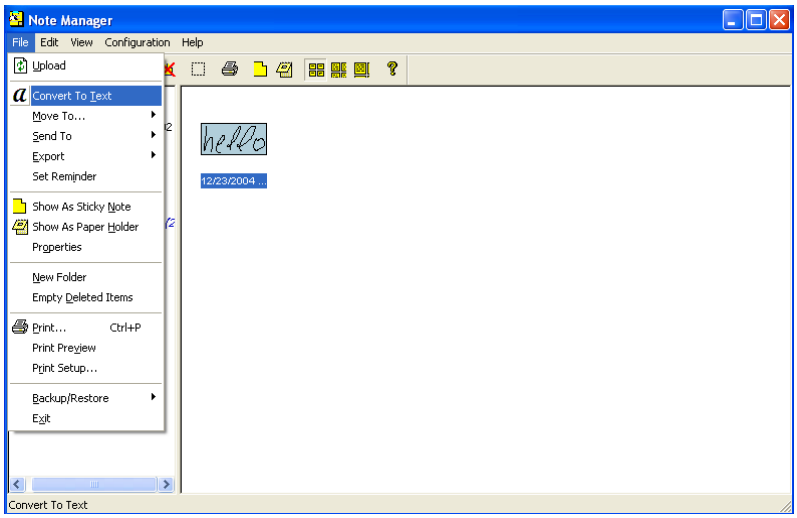

Sticky Note from 'Digiscribble Manager'-

Right clicking the 'Sticky Note' and selecting "*Convert to Text*" menu

Your Note will be exported to **MyScript® Notes** application.

MyScript® Notes will be opened with your Note in the 'Conversion' area.

Please refer to the **MyScript® Notes** user guide for more instructions of how to use the **MyScript® Notes** application.

MyScript Recognition Training

MyScript Trainer can collect samples of your handwriting and use them to create a recognition profile. When you run the training program, you need to copy out some sample text with your usual writing device and from those samples; it will create a personal recognition profile for you.

Please note: MyScript Trainer will only work with the languages supported. (Except Japanese and Chinese)

To use the Trainer, start the application from the Windows **Start** menu.
The Trainer gives you step-by-step instructions, so simply follow them.
The end result is a recognition profile file that is saved on your computer.

Creating a recognition profile

1. To create your personal handwriting profile, you need to go through the MyScript Trainer training process. The wizard will explain step-by-step what you need to do.
2. Here is an overview of the training process:
3. Start the training process by starting MyScript Trainer from the Windows Start menu.
4. Follow the instructions in the wizard, clicking **Next** to move through the pages. You will need to give a name for the profile and choose in which language you intend to write the samples.
5. When you arrive at the writing samples, we recommend that you print them out: you must copy their content into your notebook or another writing device.
6. When copying, make sure you print the alphabet and symbols letter by letter. The sentences should be written in the style you intend to use all the time. If you make a mistake, cross it out and rewrite the word and keep writing. You will correct mistakes at the end of the process. Do not skip any text.
7. When you have finished, you should convert the notes using MyScript and save them to your desktop or in a new folder (for example, you may need to save the data from your scribble to your the Note Manger software first if you have captured the training notes remotely). You will then have to insert the converted training notes files when asked.
8. Once you insert your training samples, MyScript Trainer will process the data: this will take a few minutes. Trainer will create a profile in the chosen language with the name you gave.
9. Close the Trainer wizard by clicking the **Finish** button.

Remember that you can create a profile for each language in which you write notes (except for Asian languages). Simply run the training program again, choosing the relevant language from the drop-down list.

Troubleshooting the training process

I have a recognition profile from a previous version of MyScript Trainer. Can I still use it?
No, because the technology behind MyScript Trainer has changed. We recommend that you create a new profile (you can use your old training ink file, if you still have it, although you will need to add some new characters; this is explained in the document about updating profiles).

When I try to choose my file for the training program, I cannot see it in the dialog box.
If you cannot see your file in the browse dialog box, perhaps it is not in the correct file format.

I do not seem to have enough valid characters in my sample text to create a profile.
There may be two explanations:

- Firstly, you may not have included all the necessary pages from your training samples file. Return to the **Browse** button in the MyScript Trainer wizard, reselect your file and check that all the pages are present and activated in the wizard. There is a tick under each page that will be included in the training.
- Otherwise, you may have made too many errors when copying out your sample text. You can try to edit the ink file or if you prefer, copy out the samples again, taking more care.

Windows Vista & Office 2007 Digital Ink Features

Using Input Panel in Windows Vista

This section describes the usage of *Windows Vista input panel* with digiscribble. You must enable the tablet pc function within Widows Vista Start/All Program's/Accessories/Tablet PC.
(*Note:* This feature is only supported in the following Vista editions: Windows Vista Home Premium, Windows Vista Business, Windows Vista Enterprise, and Windows Vista Ultimate)

Once you have your *digiscribble* plugged into your PC, Windows Vista 'Tablet PC Input Panel' is docked on the left side of the screen in all applications by default

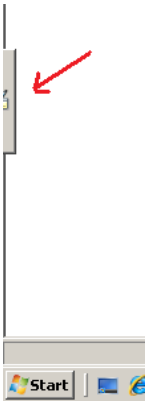

Start using the 'Tablet PC Input Panel'

Start the Tablet PC Input Panel by clicking on it with your pen.
Note:
Select "Tools," then "Options" to access other configuration settings.

Note: You can change the initial location of the Tablet PC Input Panel by dragging it to any spot on the left or right of the screen.

To use the Tablet PC Input Panel, place your cursor in a data entry field in an application, such as an Outlook Email message, a word processor, spreadsheet or Web browser.
A small 'Floating' Icon of the Input panel will appear.
To start using it, simply click it using your Pen.

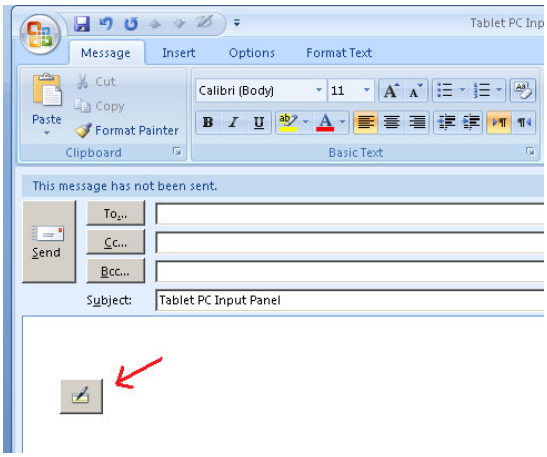

Entering text

The Tablet PC Input Panel is divided into three sections, accessible by selecting the tabs simulating a Writing Pad, a slotted Character Pad and a Keyboard. Freeform writing is used on the Writing Pad, which shows the recognized text on the line directly below. Characters are entered on the Character Pad, which also shows the recognized text. The on-screen Keyboard simulates a standard QWERTY layout.

Trouble Shooting

a. In case the 'Floating' Input panel does not appear
(While your cursor is in a data entry field in an application)

- Open the Tablet PC Input Panel
- Click 'Tools' then 'Options'

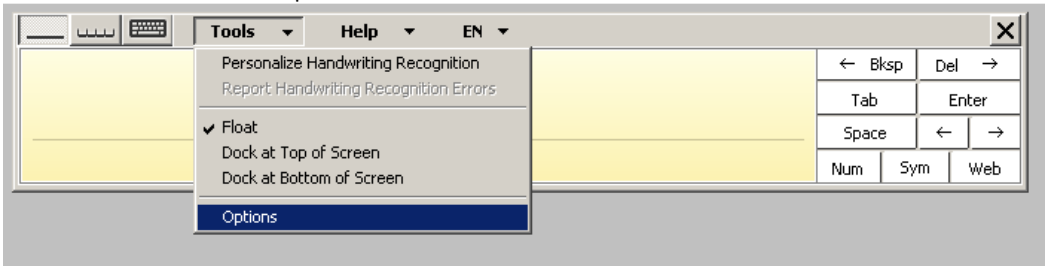

- In the 'Opening' TAB, make sure the following option is checked:

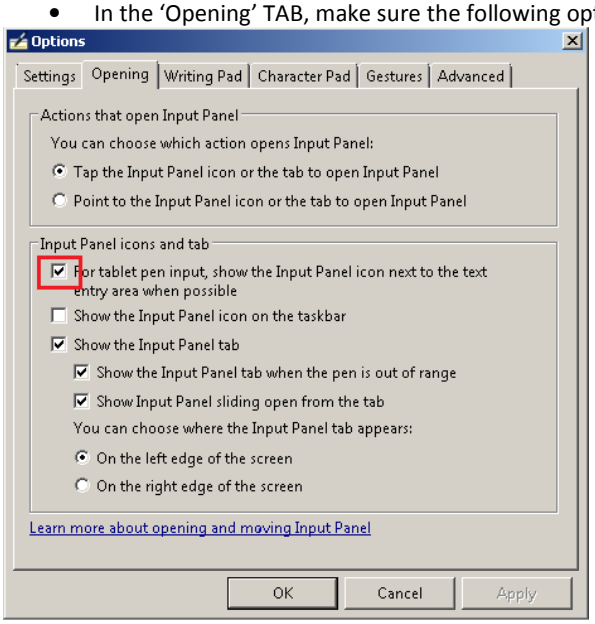
Options
Settings
Opening
Writing Pad
Character Pad
Gestures
Advanced
Actions that open Input Panel
You can choose which action opens Input Panel:
Tap the Input Panel icon or the tab to open Input Panel
Point to the Input Panel icon or the tab to open Input Panel
Input Panel icons and tab
For tablet pen input, show the Input Panel icon next to the text entry area when possible
Show the Input Panel icon on the taskbar
Show the Input Panel tab
Show the Input Panel tab when the pen is out of range
Show Input Panel sliding open from the tab
You can choose where the Input Panel tab appears:
On the left edge of the screen
On the right edge of the screen
Learn more about opening and moving Input Panel
OK
Cancel
Apply

- Click OK

Reference:

- http://www.microsoft.com/windows/products/windowsvista/features/details/tabletpc.mspx
- http://www.ehow.com/how_2054494_use-windows-vista-tablet.html

Using Windows Vista Ink capabilities

The following document describes Windows Vista Ink application and the usage with your digiscribble pen. To use Vista Ink features, your Digiscribble must be installed.
(Appendix A describes how to enable Ink in Vista)
Once your Digiscribble is plugged into a USB port, Vista will enable its Ink features. The 'Input Panel' will be enabled, as well as Microsoft Office Ink features. You can use all of these applications with digiscribble.

Using Input Panel in Windows Vista

The following section describes the usage of *Windows Vista input panel* with your digiscribble.
Once you have your *Digiscribble* plugged into your PC, Windows Vista 'Tablet PC Input Panel' is docked on the left side of the screen by default.

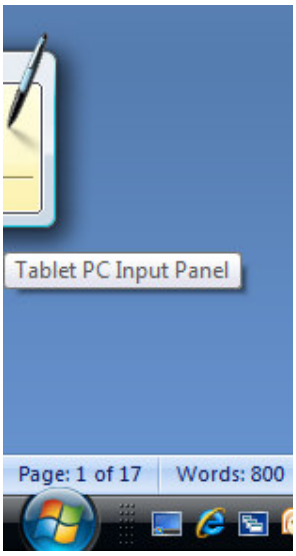

Note:
This feature is only supported in the following Vista editions:
Windows Vista Home Premium, Windows Vista Business, Windows Vista Enterprise, and Windows Vista Ultimate

Start using the 'Tablet PC Input Panel'

Start the 'Tablet PC Input Panel' by clicking on it with your pen.
Note:
Select "Tools" then "Options" to access other configuration settings

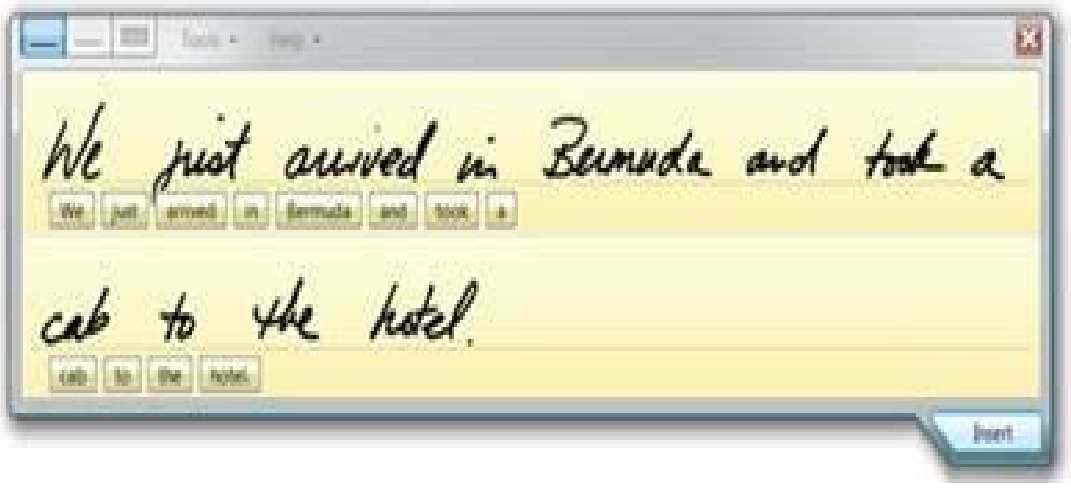

Note: You can change the initial location of the 'Tablet PC Input Panel' by dragging it to any spot on the left or right of the screen.

To use the 'Tablet PC Input Panel', place your cursor in a data entry field in an application, such as an Outlook Email message, a word processor, spreadsheet or Web browser.

A small 'Floating' Icon of the Input panel will appear.

To start using it, simply click it using your Pen.

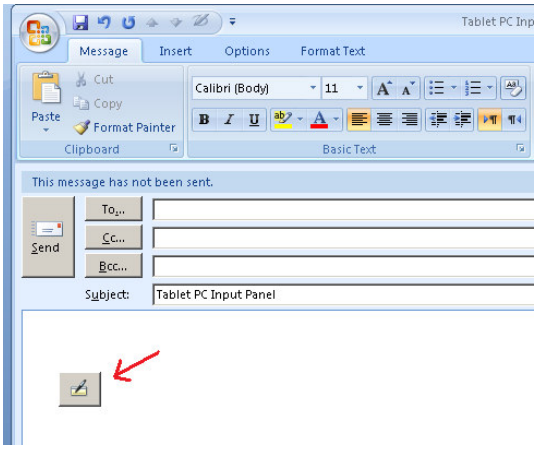

Entering text

The 'Tablet PC Input' Panel is divided into three sections, accessible by selecting the tabs simulating a Writing Pad, a slotted Character Pad and a Keyboard. Freeform writing is used on the Writing Pad, which shows the recognized text on the line directly below. Characters are entered on the Character Pad, which also shows the recognized text. The on-screen Keyboard simulates a standard QWERTY layout.

Using Digiscribble in Windows Journal

Use your Digiscribble to Ink inside any Journal file. You can use your Digiscribble as a mouse, to use any of the Journal tools, such as Lasso, rectangle, colors and more**.**

1. OPEN JOURNAL

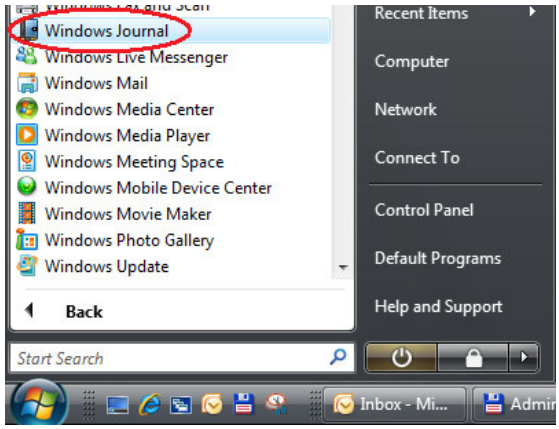

2. USE YOUR DIGISCRIBBLE TO INK ON THE PAGE, AND SELECT ANY OF THE JOURNAL TOOLS

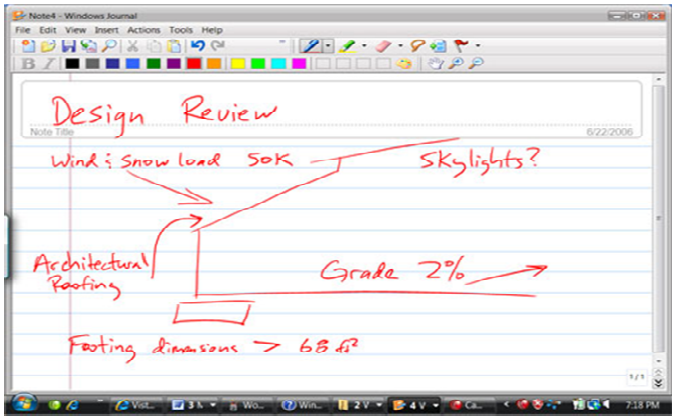

Journal page showing sketching and annotation

Using Ink in Sticky Notes

Use your Digiscribble to Ink a new Sticky Note

1. OPEN STICKY NOTES

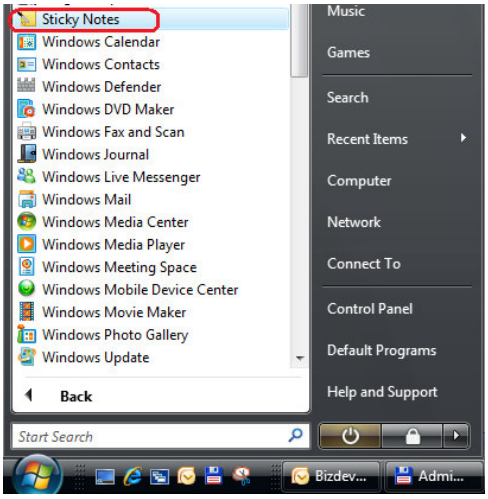

2.USE YOUR DIGISCRIBBLE TO INK ON THE STICKY NOTE

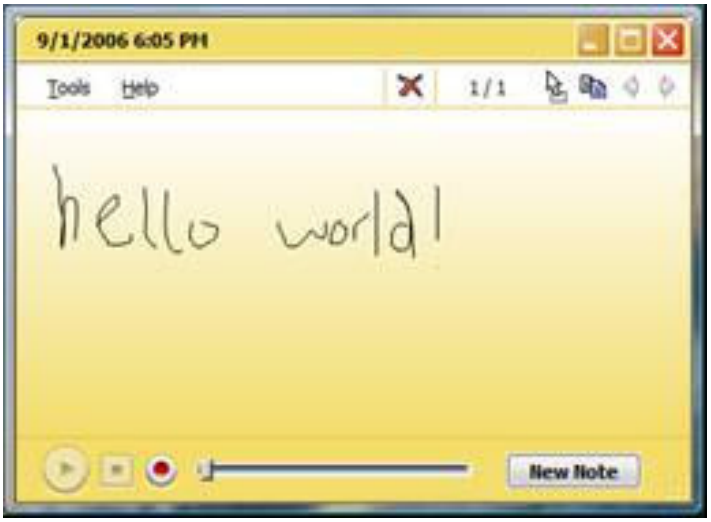

Using Ink in Windows Snipping Tool

Use your Digiscribble to Ink inside any capture done by the Vista Snipping Tool

Open the Snipping tool, capture anything you need. Now use your Pen to Ink/Annotate on top of the capture.

1. OPEN SNIPPING TOOL

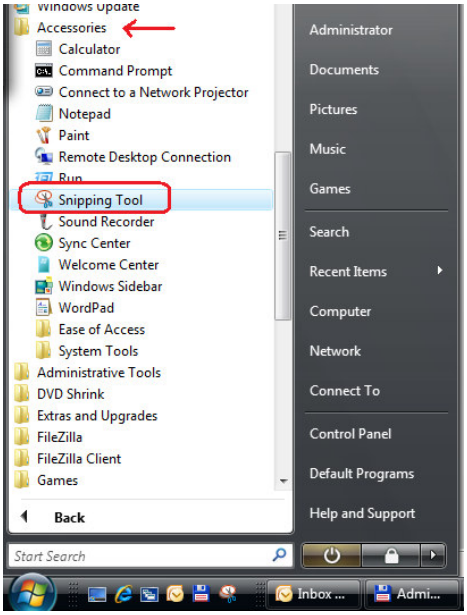

2.USE YOUR DIGISCRIBBLE TO INK ON THE SNIP

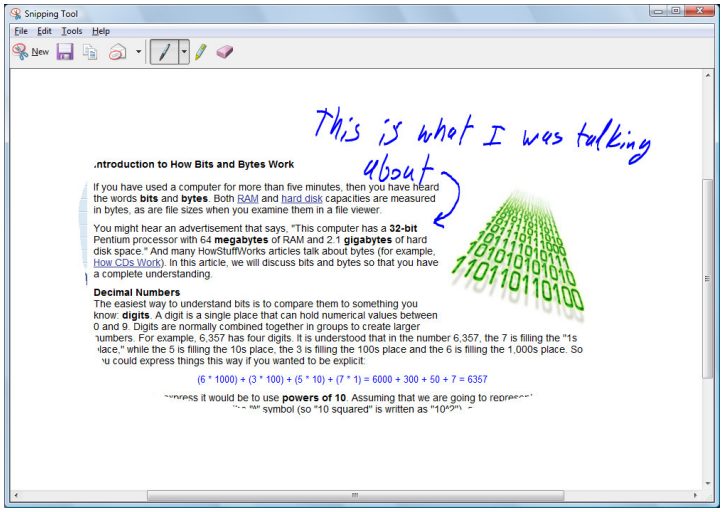

Using Ink in MS-OneNote 2007

Use your Digiscribble to add handwritten annotations into MS-OneNote 2007 files**.**

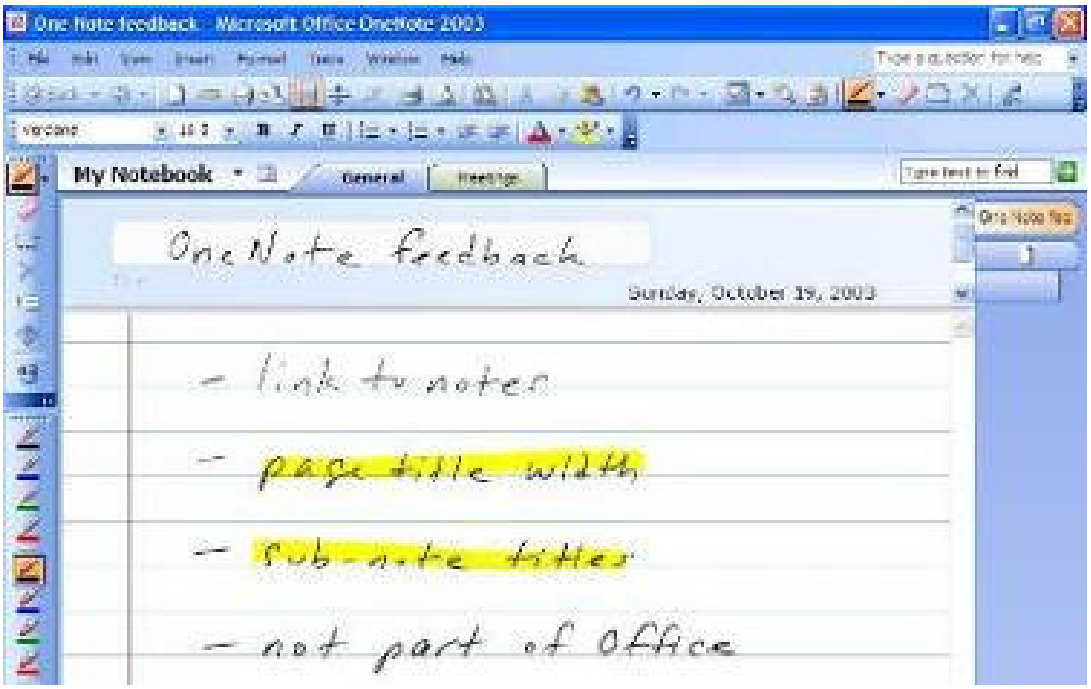

Using Ink in Outlook 2007 Message

Each time you start a new message, you can add Ink into it.
Note: You need a Digiscribble device to be installed in your machine, before Outlook is started!

1. START A NEW MAIL MESSAGE

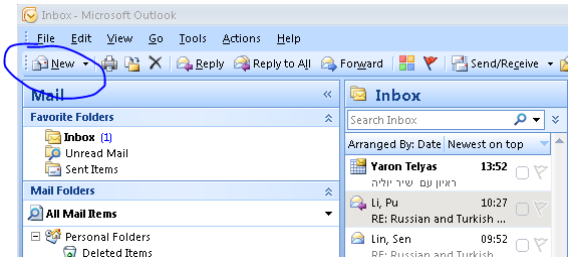

2. ONCE YOU TOUCH THE NEW EMAIL BODY, THE 'START INKING' BUTTON WILL BE ENABLED.

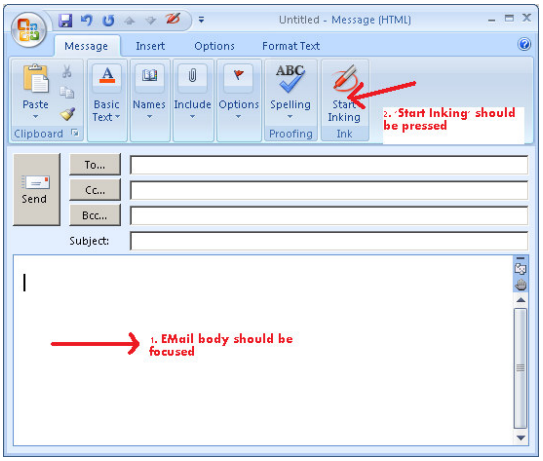

3. AFTER PRESSING THE 'START INKING', THE FOLLOWING ITEMS WILL BE SHOWN AS INK OPTIONS.
USE YOUR DIGISCRIBBLE TO INK OVER THE EMAIL

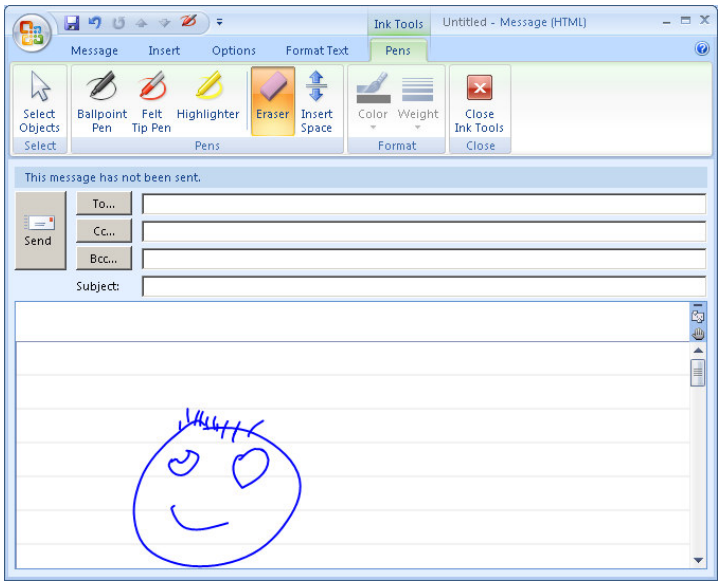

Enabling Ink in Outlook 2007 Message

The following section describes how to:

- Add the Ink feature in Microsoft Outlook 2007 toolbar
- Use Ink in new Email messages

Adding Ink to Outlook toolbar:
Note: You only need to do the following steps once

1. START A NEW MAIL MESSAGE:

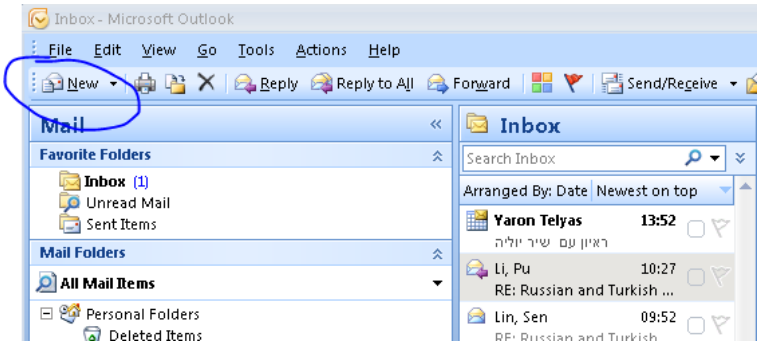

2. IN THE NEW MESSAGE, RIGHT CLICK SOMEWHERE IN THE BLUE MARKED AREA

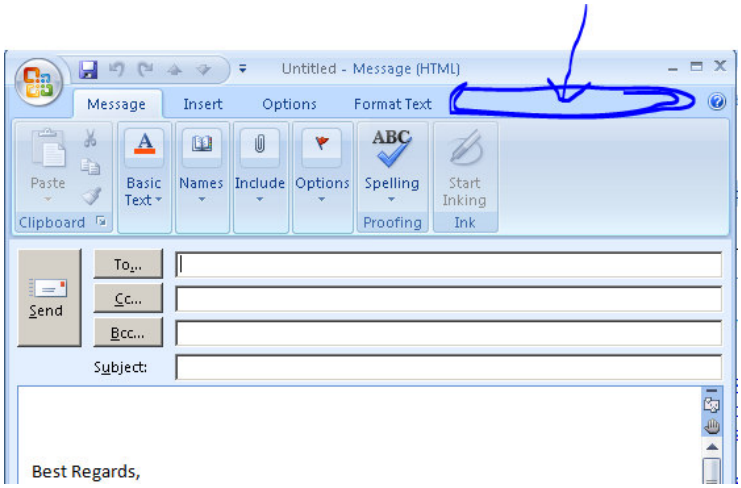

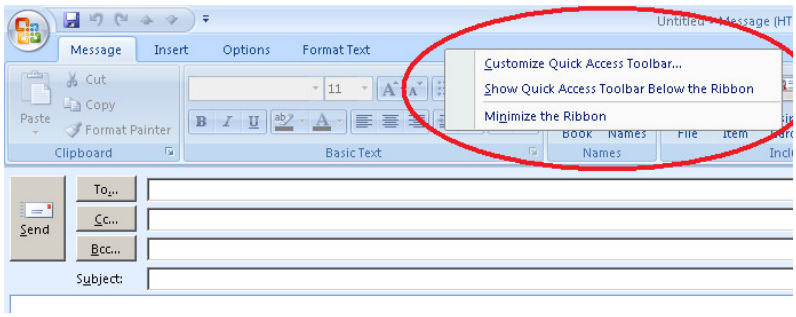

3. WHEN THE FOLLOWING MENU APPEARS, SELECT 'CUSTOMIZE QUICK ACCESS TOOLBAR'

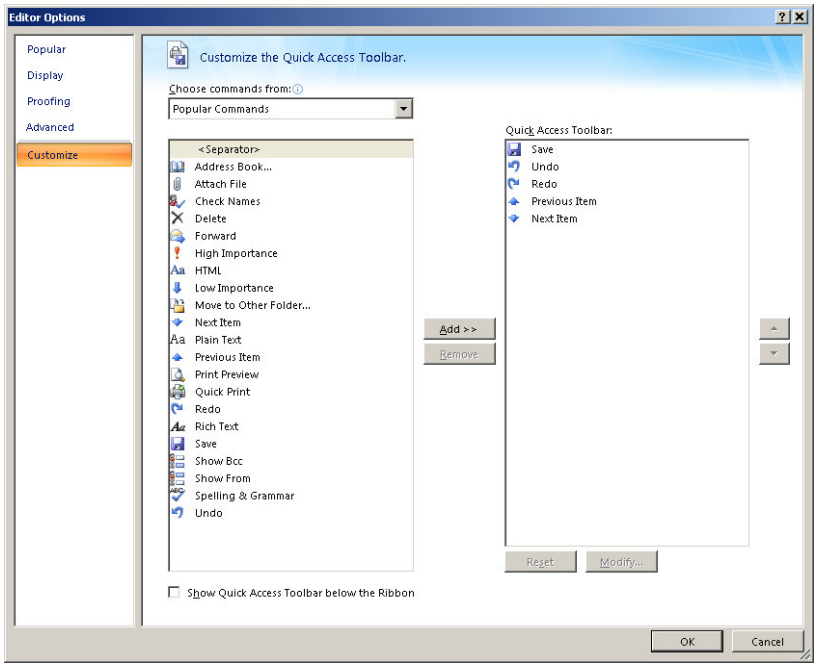

4. FROM THE FIELD 'CHOOSE COMMANDS FROM:' SELECT 'ALL COMMAND'

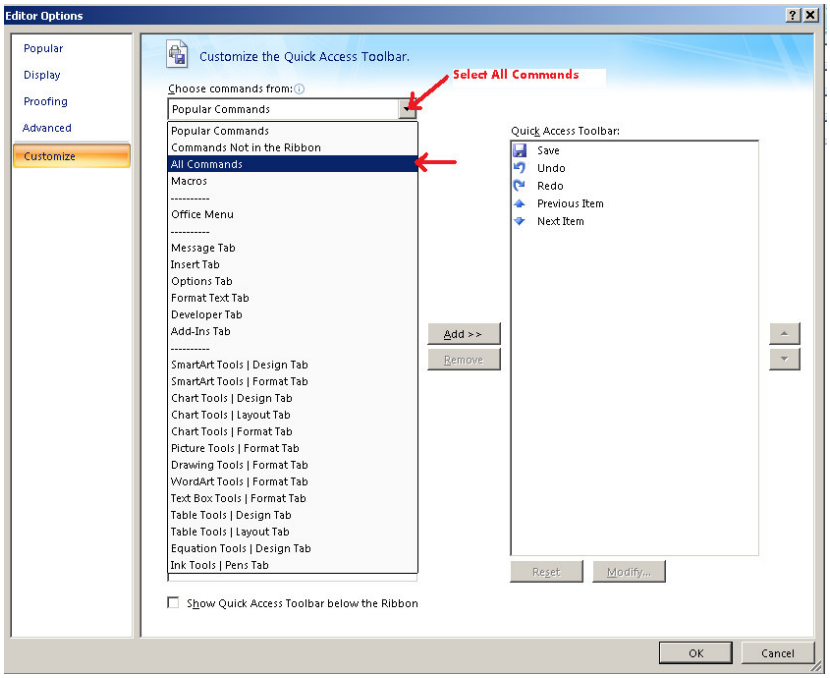

5. FROM THE LEFT LIST, SELECT 'START INKING' THEN PRESS THE 'ADD' BUTTON

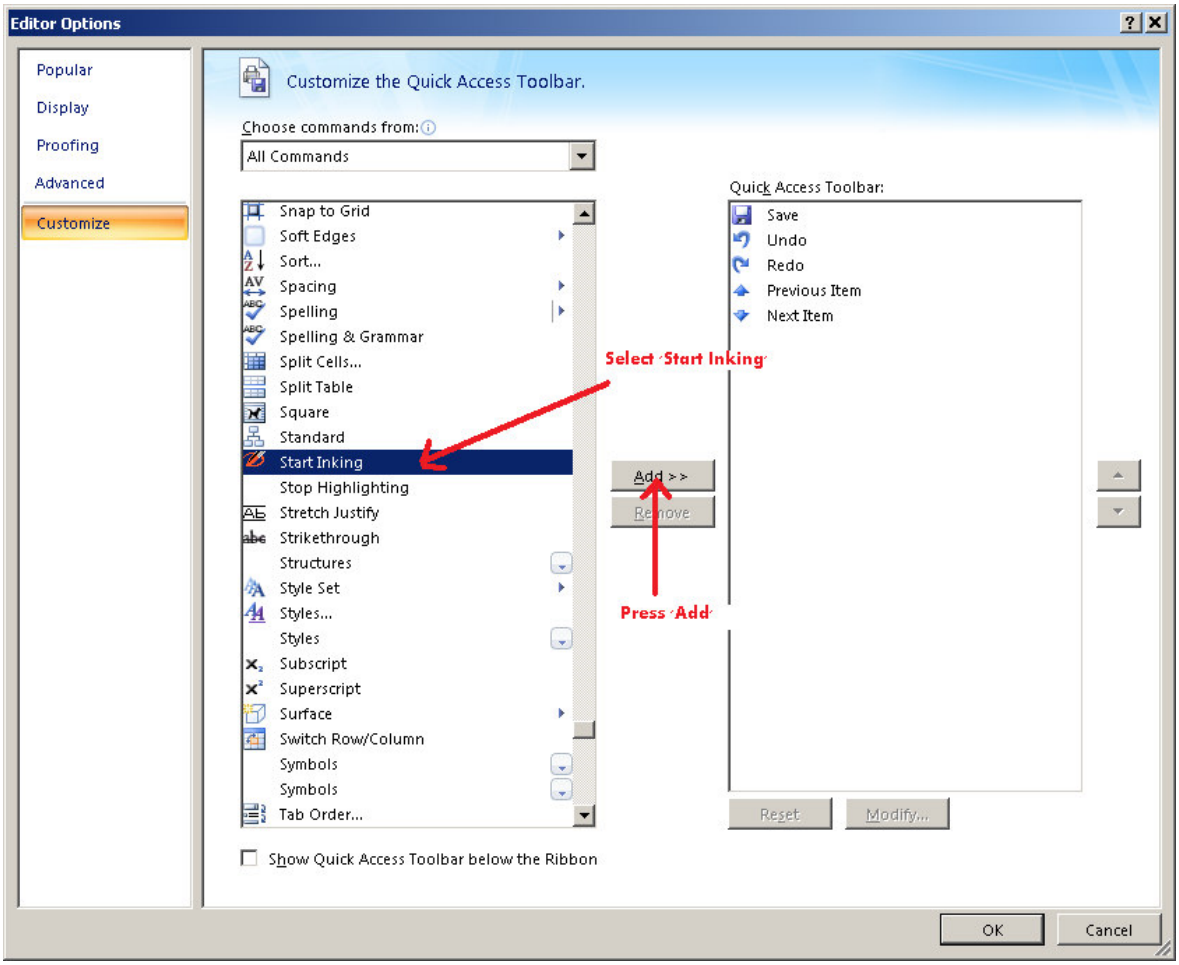

6. PRESS OK

7.CLOSE THE NEW MESSAGE

8.CLOSE OUTLOOK

9.REOPEN OUTLOOK

Adding Ink into Outlook Email Message

each time you start a new message, you can add Ink into it.

You need a Digiscribble device to be installed in your machine, before Outlook is started!

1. START A NEW MAIL MESSAGE:

2. ONCE YOU TOUCH THE NEW EMAIL BODY, THE 'START INKING' BUTTON WILL BE ENABLED.

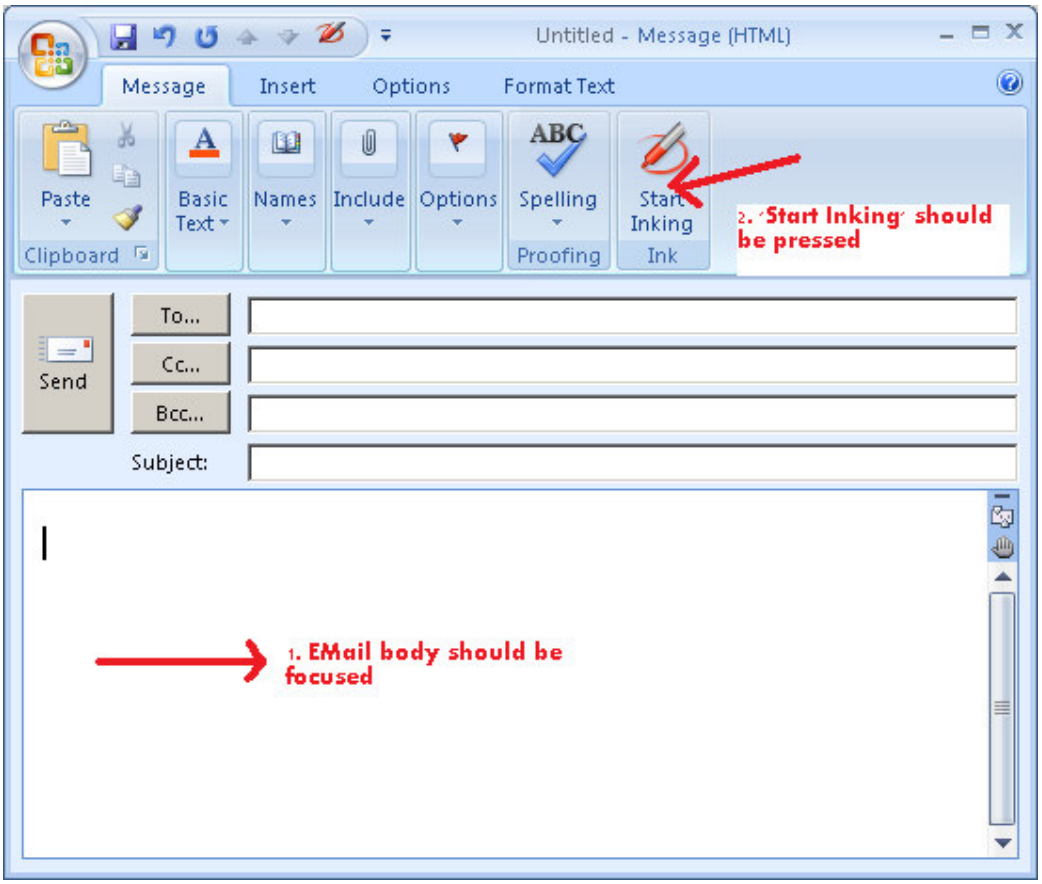

3. AFTER PRESSING THE 'START INKING', THE FOLLOWING ITEMS WILL BE SHOWN AS INK OPTIONS

4. USE YOUR DIGISCRIBBLE TO INK OVER THE EMAIL

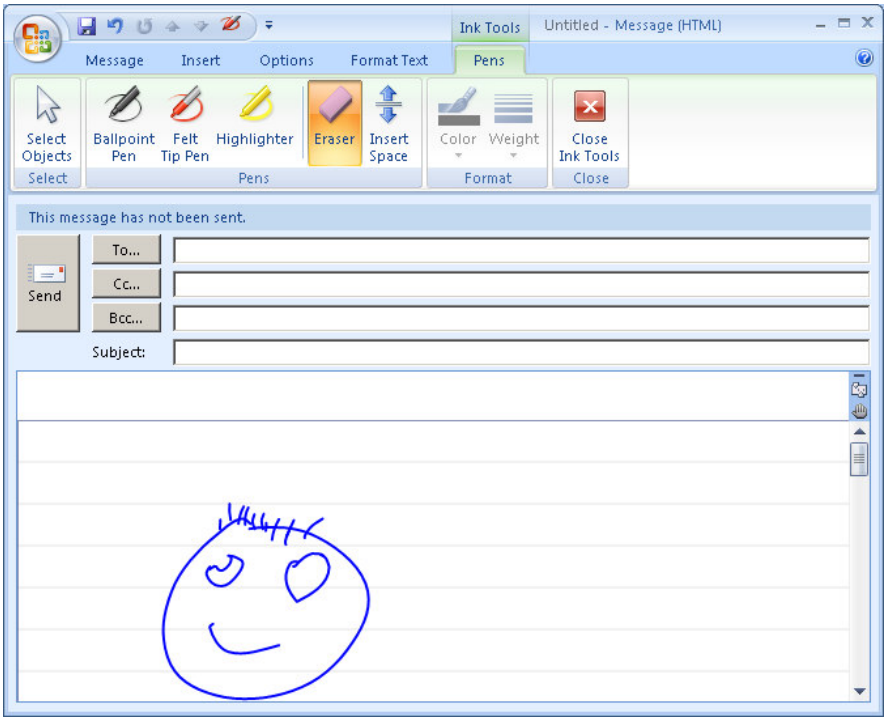

Handwriting recognition

Besides keyboard layouts and East Asian IMEs, Windows Vista has added handwriting recognition as an out of box experience. Not only is this available for Tablet PCs, but is also found in the desktop / laptop versions of the operating system. Thus if you have some type of pen input device you have access to handwriting input. In fact you can use your mouse as rudimentary input device for Vista.

Figure 2: Japanese Handwriting Input on an English Windows Vista

Every version of Vista has access to the following handwriting recognition engines:

Chinese (Simplified)	French	Korean
Chinese (Traditional)	German	Portuguese
English	Italian	Spanish
Dutch	Japanese	

Client Diagnose Application (CDA)

General Overview

The CDA is a diagnostic tool, designed to help our Technical support team solving client's cases.
After you have installed the NoteManager application, you will find the 'CDA.exe' file in the installation directory.
(Default is: C:\Program Files\PC Pen\NoteManager\)

Running the CDA.exe will collect the following information from your PC:

- Operating system
- CPU type and speed
- Total and free physical memory
- Total and free disk space
- Screen resolution
- Display Color configuration
- Other USB devices on your system
- Microsoft Office and OneNote® 2003 Version
- Microsoft Internet Explorer Version
- NoteManager components versions
- Serial ports on your system
- NoteManager registry entries

You will then be asked to draw some circles on screen.
All collected data is stored in 4 files, located at the NoteManager installation directory:

- NoteManager.dat
- NoteManager.log
- NoteManagerReg.txt
- LogoDef.ini

The files can be automatically or manually sent to our Technical support team.

Using the CDA

Make sure your base unit is connected to your PC

Run the CDA

The following dialog appears, explaining which data will be collected from your system

Press 'OK' to continue, or Cancel to quit

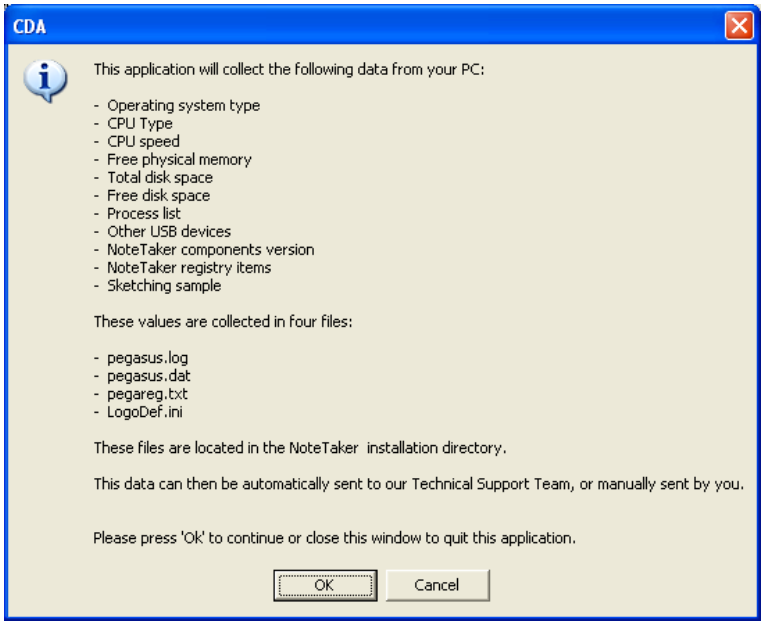
CDA
This application will collect the following data from your PC:
- Operating system type
- CPU Type
- CPU speed
- Free physical memory
- Total disk space
- Free disk space
- Process list
- Other USB devices
- NoteTaker components version
- NoteTaker registry items
- Sketching sample
These values are collected in four files:
- pegasus.log
- pegasus.dat
- pegareg.txt
- LogoDef.ini
These files are located in the NoteTaker installation directory.
This data can then be automatically sent to our Technical Support Team, or manually sent by you.
Please press 'Ok' to continue or close this window to quit this application.
OK
Cancel

Enter the following details in the next dialog

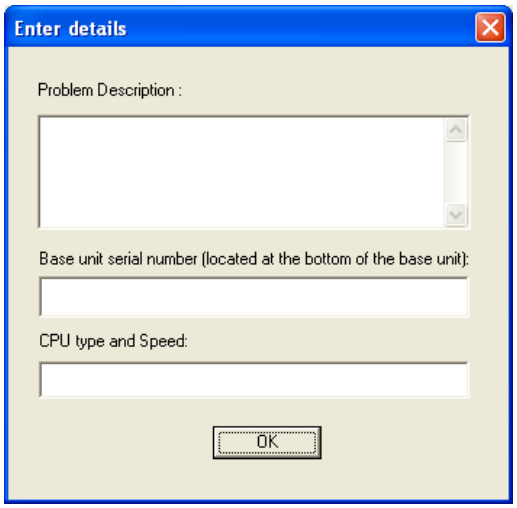

Problem Description

Base Unit Serial number
(Located at the base of the unit)

CPU type and speed

Press OK

The following dialog will ask you to draw some circles:

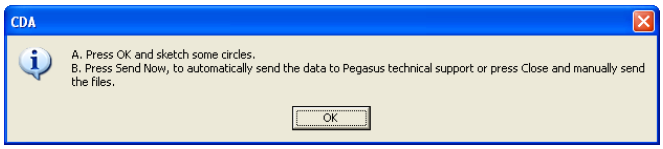
CDA
A. Press OK and sketch some circles.
B. Press Send Now, to automatically send the data to Pegasus technical support or press Close and manually send the files.
OK

Press OK

Draw some circles using your Pen

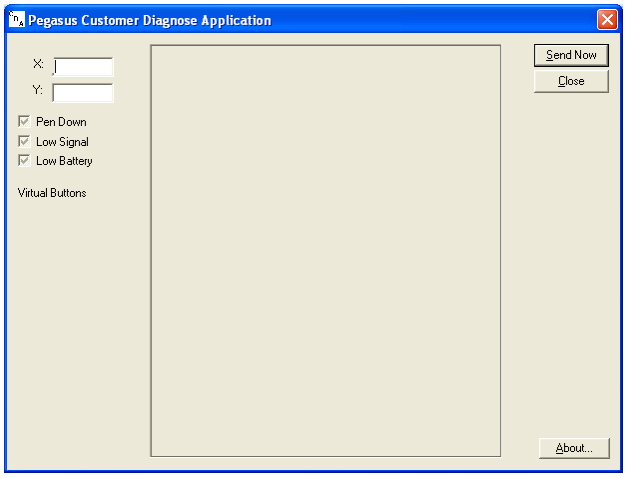

Press 'Send Now' to automatically send an e-mail to our technical support team

OR

Press 'Close' to manually send the 4 files (NoteManager.dat, NoteManager.log, NoteManagerReg.txt). These files will be located in the installation folder of the NoteManager) to support@pegatech.com

Taking Care of Your PC Pen

Storing your digiscribble

Keep your pen away from liquids and direct sunlight at all times.
Always store your unit in protected packaging or in the original box.
Severe shock can cause degradation in performance. Do not drop the units or pen onto hard ground.

Cleaning your PC Pen

Clean your PC Pen using a soft cloth.
Special care must be taken not to insert sharp pointed objects into the ultrasonic transmitting and receiving units

Apcom Limited WEEE Number DB0080UV